

S9 Tones List

Num.	Name	PC	CC00
PIANO			
0001	VIVO Live	2	2
0002	Japan Grand	2	5
0003	Japan Live	2	6
0004	VIVO Upright	1	2
0005	VIVO Grand	2	0
0006	Pop Grand	2	1
0007	Japan Bright	2	8
0008	Classic Grand	1	0
0009	Japan Classic	2	7
0010	Bright Piano	2	3
0011	Piano Memory	2	4
0012	Japan Memory	2	9
0013	Elec.Grand	3	2
0014	E.Grand Trem	3	3
0015	Rock Piano	3	1
E.PIANO			
0016	Dyno Stage	5	0
0017	Dyno Trem	5	7
0018	Dyno Bell	5	8
0019	Suitcase	5	1
0020	Phaser EP	5	2
0021	Wurly	5	5
0022	Trem.Wurly	5	6
0023	Soft E.Piano	5	3
0024	Bright E.Piano	5	4
0025	FM Full Tines	6	0
0026	FM E.Piano	6	1
PERCUSSIVE			
0027	Doctor Clav	8	2
0028	Cool Clav	8	0
0029	Funky Clav	8	3
0030	Groovy Clav	8	1
0031	Wah-Wah Clav	8	4
0032	Drive Clav	8	5
0033	Vibraphone	12	0
0034	Marimba	13	0
0035	Celesta	9	0
ORGAN TW			
More than 100 presets. See next pages.			

Num.	Name	PC	CC00
STRINGS			
0036	Easy Strings	50	10
0037	FastOrchestra	50	4
0038	Attack Strings	49	2
0039	Choir Strings	52	1
0040	Large Strings	50	5
0041	MellowStrings	50	6
0042	Soft Strings	50	7
0043	5th Strings	50	8
0044	Slow Analog	50	9
PAD / CHOIR			
0045	Warm Pad	90	0
0046	Soft Pad	90	1
0047	Square Pad	90	2
0048	Organ Pad	90	3
0049	90's Pad	51	2
0050	Mmh Choir	53	0
0051	Choir Pad	54	1
0052	Space Vox	55	1
0053	Fanta Bell	101	0
BRASS / SYNTH			
0054	Brass Sect.	62	0
0055	Brass Ens.	62	1
0056	Synth Brass	63	0
0057	Poly Brass	63	1
0058	Analog Brass	63	2
0059	Fat Syn Brass	63	3
0060	OB Synth 1	81	0
0061	OB Synth 2	81	1
0062	OB Synth 3	81	2
0063	OB Synth 4	81	3
0064	Lyle Lead	81	4
0065	Super Saw	91	1
0066	Fast Synth	91	2
0067	Poly Saw	91	3
0068	Euro Synth	91	4
0069	Euro Stack	94	0
0070	Poly Chord	94	1
0071	Dexi Heaven	101	1

Num.	Name	PC	CC00
GUITAR / BASS			
0072	Nylon Guitar	25	0
0073	Steel Guitar	26	0
0074	Overdrive GT.	30	0
0075	Acoustic Bs.	33	0
0076	Double Bass	33	3
0077	Ac.Bass&Ride	33	1
0078	Double Bs&Ride	33	4
0079	Fingered Bs.	34	0
0080	5 String Bass	34	1
0081	Picked Bs.	35	0
0082	Pedal Bass	39	5
0083	Pedal DoubleBs	33	5
0084	Modular Bass	39	1
0085	Fat Bass	39	2
0086	Reso Bass	39	3
0087	Big Reso Bass	39	4
0088	FM Bass	40	3
0089	Synth Bass	39	0

S9 ORGAN Presets List

TW 1 / TW 2

MAIN PRESET	
0001	00 5320 000
0002	00 4432 000
0003	00 8740 000
0004	00 4544 222
0005	00 5403 000
0006	00 4675 300
0007	00 5645 320
0008	00 6876 540
0009	32 7645 222
0010	88 8000 000
0011	87 8000 456
0012	88 8800 000
0013	86 8600 008
0014	80 8800 008
0015	87 6543 211
0016	88 5324 588
0017	80 8000 008
0018	88 8233 211
0019	86 4200 357
0020	68 6040 000
0021	88 8604 000
0022	80 0008 888
0023	00 8800 000

LOWER PRESET	
0001	00 4545 440
0002	00 4423 220
0003	00 7373 430
0004	00 4544 220
0005	00 6644 322
0006	00 5642 200
0007	00 6845 433
0008	00 8030 000
0009	42 7866 244
0010	60 6000 000
0011	88 00 70 770
0012	83 8000 000
0013	00 4440 000
0014	20 7004 000
0015	00 6620 000
0016	00 7500 000
0017	80 8400 008

PEDAL PRESET	
0001	73
0002	85
0003	80
0004	08
0005	28

FARF

MAIN PRESET	
0001	08 0088 888
0002	80 8000 808
0003	80 8080 808
0004	08 0888 808
0005	08 8880 800

LOWER PRESET	
0001	80 8000 008
0002	08 0000 800
0003	80 8080 008
0004	00 8088 800
0005	00 0880 080

PEDAL PRESET	
0001	80
0002	88

VX

MAIN PRESET	
0001	38 8033 078
0002	80 8000 008
0003	88 8026 057
0004	08 0048 088
0005	88 0048 056

LOWER PRESET	
0001	03 8800 367
0002	08 8000 008
0003	08 0800 557
0004	03 8000 667
0005	05 6700 475

PEDAL PRESET	
0001	88 0000 080
0002	08 0000 088
0003	88 0000 008
0004	88 0000 088
0005	80 0000 088

PIPE

MAIN PRESET	
0001	00 8000 000
0002	08 8000 000
0003	08 8800 000
0004	08 8880 000
0005	88 8888 000

LOWER PRESET	
0001	08 0000 000
0002	88 0000 000
0003	88 8000 000
0004	88 8800 000
0005	88 8808 000

PEDAL PRESET	
0001	800
0002	880
0003	888
0004	080
0005	808

S9 ORGAN Presets List

USER 1

MAIN PRESET	
0001	00 8000 000
0002	08 8000 000
0003	08 8800 000
0004	08 8880 000
0005	88 8888 000

LOWER PRESET	
0001	08 0000 000
0002	88 0000 000
0003	88 8000 000
0004	88 8800 000
0005	88 8808 000

PEDAL PRESET	
0001	800 0000 000
0002	880 0000 000
0003	888 0000 000
0004	080 0000 000
0005	808 0000 000

USER 2

MAIN PRESET	
0001	00 8000 000
0002	08 8000 000
0003	08 8800 000
0004	08 8880 000
0005	88 8888 000

LOWER PRESET	
0001	08 0000 000
0002	88 0000 000
0003	88 8000 000
0004	88 8800 000
0005	88 8808 000

PEDAL PRESET	
0001	800 0000 000
0002	880 0000 000
0003	888 0000 000
0004	080 0000 000
0005	808 0000 000