

SX8 Tones List

Num.	Name	PC	CC00 (MSB)
------	------	----	------------

PIANO

0001	Italian Live PLT	1	71
0002	Italian PLT	1	70
0003	Italian Classic PLT	1	72
0004	Italian Bright PLT	1	73
0005	Italian Memory PLT	1	74
0006	USA Live PLT	1	61
0007	USA PLT	1	60
0008	USA Classic PLT	1	62
0009	USA Bright PLT	1	63
0010	USA Memory PLT	1	64
0011	VIVO Upright	1	2
0012	Elec.Grand	3	2
0013	E.Grand Trem	3	3
0014	Rock Piano	3	1

E.PIANO

0015	EPBell Chorus PLT	5	107
0016	EPBell Phaser PLT	5	108
0017	EPBell Tremolo PLT	5	109
0018	EPBell OD PLT	5	110
0019	EPBell Phr+Trm PLT	5	111
0020	EPBell Flanger PLT	5	113
0021	EPBell HardOD PLT	5	114
0022	EPBell Bri+Cho PLT	5	115
0023	EPBell PLT	5	106
0024	70s EP Chorus PLT	5	101
0025	70s EP Phaser PLT	5	102
0026	70s EP Tremolo PLT	5	103
0027	70s EP OD PLT	5	104
0028	70s EP Phr+Trm PLT	5	105
0029	70s EP Bright PLT	5	116
0030	70s EP Bri+Cho PLT	5	117
0031	70s EP Bri+Pha PLT	5	118
0032	70s EP Bri+Tre PLT	5	119
0033	70s EP PLT	5	100
0034	Dirty EPBell PLT	5	112
0035	Dyno Stage	5	0
0036	Dyno Trem	5	7
0037	Dyno Bell	5	8
0038	Suitcase	5	1
0039	Phaser EP	5	2
0040	Wurly	5	5
0041	Trem.Wurly	5	6
0042	Soft E.Piano	5	3
0043	Bright E.Piano	5	4
0044	FM Full Tines	6	0
0045	FM E.Piano	6	1

Num.	Name	PC	CC00 (MSB)
------	------	----	------------

PERCUSSIVE

0046	Doctor Clav	8	2
0047	Cool Clav	8	0
0048	Funky Clav	8	3
0049	Groovy Clav	8	1
0050	Wah-Wah Clav	8	4
0051	Drive Clav	8	5
0052	Vibraphone	12	0
0053	Marimba	13	0
0054	Celesta	9	0

ORGAN TW

More than 100 presets.
See next pages.

STRINGS

0055	Easy Strings	50	10
0056	FastOrchestra	50	4
0057	Attack Strings	49	2
0058	Choir Strings	52	1
0059	Large Strings	50	5
0060	MellowStrings	50	6
0061	Soft Strings	50	7
0062	5th Strings	50	8
0063	Slow Analog	50	9
0064	Orchestra	49	1
0065	80's Strings	52	0
0066	Syn. Strings	51	1
0067	Pizzicato	46	0
0068	Strings Pad	51	0
0069	StrTape1Dry	49	100
0070	StrTape1Rev	49	101
0071	StrTape1Cut	49	102
0072	Cllotape2Dry	43	103
0073	Cllotape2Rev	43	104
0074	Cllotape2Cut	43	105
0075	VlnsTape1Dry	50	100
0076	VlnsTape1Rev	50	101
0077	VlnsTape1Cut	50	102

PAD / CHOIR

0078	Dexi Heaven	101	1
0079	Fanta Bell	101	0
0080	Warm Pad	90	0
0081	Soft Pad	90	1
0082	Square Pad	90	2
0083	90's Pad	51	2
0084	Space Vox	55	1
0085	Mmh Choir	53	0

Num.	Name	PC	CC00 (MSB)
------	------	----	------------

0086	Choir Pad	54	1
0087	FlutTape1Dry	74	100
0088	FlutTape1Rev	74	101
0089	FlutTape1Cut	74	102
0090	FemlTape2Dry	53	103
0091	FemlTape2Rev	53	104
0092	FemlTape2Cut	53	105
0093	BoysTapeDry	53	100
0094	BoysTapeRev	53	101
0095	BoysTapeCut	53	102
0096	MaleTape1Dry	53	106
0097	MaleTape1Rev	53	107
0098	MaleTape1Cut	53	108

BRASS / SYNTH

0099	Full Brass	62	3
0100	Synth Brass	63	0
0101	Poly Brass	63	1
0102	Analog Brass	63	2
0103	Fat Syn Brass	63	3
0104	Trumpet Sect.	57	3
0105	Trumpet	57	2
0106	Horns	61	0
0107	Tenor Sax	67	0
0108	Alto Sax	66	0
0109	Flugelhorn	57	1
0110	Soprano Sax	65	0
0111	Classic Trumpet	57	0
0112	Lucky Lead	83	0
0113	Expressive	83	1
0114	ExpressiveFat	83	2
0115	ExpressiveBell	83	3
0116	Mellow Lyle	83	4
0117	Octave OSC	83	5
0118	Mellow Lead	83	6
0119	Clear Lead	83	7
0120	Saw Solo	83	8
0121	OSC Sync	83	9
0122	Mini Square	83	10
0123	Mini Triangle	83	11
0124	Triangle	83	12
0125	Pure Sine	83	13
0126	Saw Square	83	14
0127	Clear SawSqr	83	15
0128	70's SawSqr	83	16
0129	2600 Pulse 50	83	17
0130	2600 Pulse 20	83	18
0131	2600 PulseOD	83	19

Num.	Name	PC	CC00 (MSB)
------	------	----	------------

Num.	Name	PC	CC00 (MSB)
------	------	----	------------

Num.	Name	PC	CC00 (MSB)
------	------	----	------------

0132	Clear PW	83	20
0133	OB Synth 1	81	0
0134	OB Synth 2	81	1
0135	OB Synth 3	81	2
0136	OB Synth 4	81	3
0137	Lyle Lead	81	4
0138	Super Saw	91	1
0139	Synth Lead 1	82	0
0140	Synth Mellow	82	1
0141	Synth Lead 2	82	2
0142	Synth Lead 3	82	3
0143	Synth Lead 4	82	4
0144	Fast Synth	91	2
0145	Poly Saw	91	3
0146	Euro Synth	91	4
0147	Euro Stack	94	0
0148	Poly Chord	94	1
0149	Synth Vox	55	0
0150	Urban Harp	47	1
GUITAR / BASS			
0151	Nylon Guitar	25	0
0152	Power GT.	30	1
0153	Muted GT.	30	2
0154	Jazz Guitar	27	0
0155	Rock Bass	35	1
0156	RockSlapBass	38	0
0157	RockSoftSlap	38	1
0158	Elec.Bass	34	2
0159	El.Bass Dark	34	3
0160	Soft Slap Bs	37	0
0161	Hard Slap Bs	37	1
0162	Pop Big Bass	34	4
0163	Pop Bass	34	5
0164	Pop Elec.Bass	34	6
0165	Fat Bass	34	7
0166	Contemp.Bass	34	8
0167	PalmMutingBs	34	9
0168	Old Muted	35	2
0169	Fretless Bass	36	0
0170	Upright Bass	33	7
0171	Pedal Bass	39	5
0172	Pedal DoubleBs	33	5
0173	Modular Bass	39	1
0174	Fat Bass	39	2
0175	Reso Bass	39	3
0176	Big Reso Bass	39	4
0177	FM Bass	40	3
0178	Synth Bass	39	0

SX8 ORGAN Presets List

TW 1 (CCOO/MSB=0, CC32/LSB=1, PC=1)

TW 2 (CCOO/MSB=0, CC32/LSB=1, PC=4)

UPPER PRESET		LOWER PRESET		PEDAL PRESET	
0001	00 5320 000	0001	00 4545 440	0001	73
0002	00 4432 000	0002	00 4423 220	0002	85
0003	00 8740 000	0003	00 7373 430	0003	80
0004	00 4544 222	0004	00 4544 220	0004	08
0005	00 5403 000	0005	00 6644 322	0005	28
0006	00 4675 300	0006	00 5642 200		
0007	00 5645 320	0007	00 6845 433		
0008	00 6876 540	0008	00 8030 000		
0009	32 7645 222	0009	42 7866 244		
0010	88 8000 000	0010	60 6000 000		
0011	87 8000 456	0011	88 00 70 770		
0012	88 8800 000	0012	83 8000 000		
0013	86 8600 008	0013	00 4440 000		
0014	80 8800 008	0014	20 7004 000		
0015	87 6543 211	0015	00 6620 000		
0016	88 5324 588	0016	00 7500 000		
0017	80 8000 008	0017	80 8400 008		
0018	88 8233 211				
0019	86 4200 357				
0020	68 6040 000				
0021	88 8604 000				
0022	80 0008 888				
0023	00 8800 000				

FARF (CCOO/MSB=2, CC32/LSB=1, PC=1)

UPPER PRESET		LOWER PRESET		PEDAL PRESET	
0001	08 0088 888	0001	80 8000 008	0001	80
0002	80 8000 808	0002	08 0000 800	0002	88
0003	80 8080 808	0003	80 8080 008		
0004	08 0888 808	0004	00 8088 800		
0005	08 8880 800	0005	00 0880 080		

VX (CCOO/MSB=1, CC32/LSB=1, PC=1)

UPPER PRESET		LOWER PRESET		PEDAL PRESET	
0001	38 8033 078	0001	03 8800 367	0001	88 0000 080
0002	80 8000 008	0002	08 8000 008	0002	08 0000 088
0003	88 8026 057	0003	08 0800 557	0003	88 0000 008
0004	08 0048 088	0004	03 8000 667	0004	88 0000 088
0005	88 0048 056	0005	05 6700 475	0005	80 0000 088

PIPE (CCOO/MSB=0, CC32/LSB=1, PC=91)

UPPER PRESET		LOWER PRESET		PEDAL PRESET	
0001	00 8000 000	0001	08 0000 000	0001	800
0002	08 8000 000	0002	88 0000 000	0002	880
0003	08 8800 000	0003	88 8000 000	0003	888
0004	08 8880 000	0004	88 8800 000	0004	080
0005	88 8888 000	0005	88 8808 000	0005	808

SX8 ORGAN Presets List

USER 1 (CCOO/MSB=0, CC32/LSB=11, PC=1)

UPPER PRESET	
0001	00 8000 000
0002	08 8000 000
0003	08 8800 000
0004	08 8880 000
0005	88 8888 000

LOWER PRESET	
0001	08 0000 000
0002	88 0000 000
0003	88 8000 000
0004	88 8800 000
0005	88 8808 000

PEDAL PRESET	
0001	800 0000 000
0002	880 0000 000
0003	888 0000 000
0004	080 0000 000
0005	808 0000 000

USER 2 (CCOO/MSB=0, CC32/LSB=12, PC=1)

UPPER PRESET	
0001	00 8000 000
0002	08 8000 000
0003	08 8800 000
0004	08 8880 000
0005	88 8888 000

LOWER PRESET	
0001	08 0000 000
0002	88 0000 000
0003	88 8000 000
0004	88 8800 000
0005	88 8808 000

PEDAL PRESET	
0001	800 0000 000
0002	880 0000 000
0003	888 0000 000
0004	080 0000 000
0005	808 0000 000

PIPE ORGAN	
BAROQUE	
PART 1 (UPPER) (MANUAL I)	
Drawb1	BOURDON 16
Drawb2	PRINCIPAL 8
Drawb3	ROHRFLÖTE 8
Drawb4	OCTAVE 4
Drawb5	SUPER OKTAVE 2
Drawb6	MIXTUR IV
Drawb7	VOX HUMANA 8
Drawb8	---
Drawb9	LOWER to UPPER
PART 2 (LOWER)(MANUAL II)	
Drawb1	BOURDON 8
Drawb2	SALICIONAL 8
Drawb3	FLUTE 4
Drawb4	QUINTE 2-2/3
Drawb5	CORNET V
Drawb6	TROMPETE 8
Drawb7	---
Drawb8	---
Drawb9	---
PART 3 (PEDAL)	
Drawb1	SUBBASS 16
Drawb2	OCTAVBASS 8
Drawb3	POSAUNE 16
Drawb4	---
Drawb5	---
Drawb6	---
Drawb7	---
Drawb8	---
Drawb9	---

FARF ORGAN	
PART 1 (UPPER)	
BASS 16'	
STRINGS 16'	
FLUTE 8'	
OBOE 8'	
TRUMPET 8'	
STRINGS 8'	
FLUTE 4'	
STRINGS 4'	
2 2/3'	
PART 2 (LOWER)	
BASS 16'	
STRINGS 16'	
FLUTE 8'	
OBOE 8'	
TRUMPET 8'	
STRINGS 8'	
FLUTE 4'	
STRINGS 4'	
2 2/3'	
PART 3 (PEDAL)	
16'	
SOFT/SHARP	

VX ORGAN	
PART 1 (UPPER)	
16'	
8'	
4'	
2'	
II	
III	
IV	
∞	
M	
PART 2 (LOWER)	
16'	
8'	
4'	
2'	
II	
III	
IV	
∞	
M	
PART 3 (PEDAL)	
16'	
8'	

∞	
M	