

S10 Tones List

Num.	Name	PC	CC00 (MSB)
------	------	----	------------

PIANO			
0001	USA PLT	1	60
0002	USA Live PLT	1	61
0003	USA Classic PLT	1	62
0004	USA Bright PLT	1	63
0005	USA Memory PLT	1	64
0006	USA Rev PLT	1	65
0007	Japan PLT	2	10
0008	Japan Live PLT	2	11
0009	Japan Classic PLT	2	12
0010	Japan Bright PLT	2	13
0011	Japan Memory PLT	2	14
0012	Japan Rev PLT	2	15
0013	VIVO Upright	1	2
0014	Elec.Grand	3	2
0015	E.Grand Trem	3	3
0016	Rock Piano	3	1

E.PIANO			
0017	EPBell Chorus PLT	5	107
0018	EPBell Phaser PLT	5	108
0019	EPBell Tremolo PLT	5	109
0020	EPBell OD PLT	5	110
0021	EPBell Phr+Trm PLT	5	111
0022	EPBell Flanger PLT	5	113
0023	EPBell HardOD PLT	5	114
0024	EPBell Bri+Cho PLT	5	115
0025	EPBell PLT	5	106
0026	EP Ballad PLT	5	122
0027	70s EP Chorus PLT	5	101
0028	70s EP Phaser PLT	5	102
0029	70s EP Tremolo PLT	5	103
0030	70s EP OD PLT	5	104
0031	70s EP Phr+Trm PLT	5	105
0032	70s EP Bright PLT	5	116
0033	70s EP Bri+Cho PLT	5	117
0034	70s EP Bri+Pha PLT	5	118
0035	70s EP Bri+Tre PLT	5	119
0036	70s EP Trm+OD PLT	5	120
0037	70s EP EQ+Trm PLT	5	121
0038	70s EP PLT	5	100
0039	Dirty EPBell PLT	5	112
0040	Dyno Stage	5	0
0041	Dyno Trem	5	7
0042	Dyno Bell	5	8
0043	Suitcase	5	1
0044	Phaser EP	5	2
0045	Suitcase Trem	5	9

Num.	Name	PC	CC00 (MSB)
------	------	----	------------

0046	Suitcase Chr	5	10
0047	Suitcase Chr+Trm	5	11
0048	Wurly	5	5
0049	Trem.Wurly	5	6
0050	Soft E.Piano	5	3
0051	Bright E.Piano	5	4
0052	FM Full Tines	6	0
0053	FM E.Piano	6	1
PLUCKED / PERCUSSIVE			
0054	Doctor Clav	8	2
0055	Cool Clav	8	0
0056	Funky Clav	8	3
0057	Groovy Clav	8	1
0058	Wah-Wah Clav	8	4
0059	Drive Clav	8	5
0060	Vibraphone	12	0
0061	Marimba	13	0
0062	Celesta	9	0

ORGAN TW			
More than 100 presets. See next pages.			

STRINGS			
0063	Easy Strings	50	10
0064	FastOrchestra	50	4
0065	Attack Strings	49	2
0066	Choir Strings	52	1
0067	Large Strings	50	5
0068	MellowStrings	50	6
0069	Soft Strings	50	7
0070	5th Strings	50	8
0071	Slow Analog	50	9
0072	Orchestra	49	1
0073	80's Strings	52	0
0074	Syn. Strings	51	1
0075	Pizzicato	46	0
0076	Strings Pad	51	0
0077	StrTape1Dry	49	100
0078	StrTape1Rev	49	101
0079	StrTape1Cut	49	102
0080	CiloTape2Dry	43	103
0081	CiloTape2Rev	43	104
0082	CiloTape2Cut	43	105
0083	VlnsTape1Dry	50	100
0084	VlnsTape1Rev	50	101
0085	VlnsTape1Cut	50	102

PAD / CHOIR			
0086	Dexi Heaven	101	1

Num.	Name	PC	CC00 (MSB)
------	------	----	------------

0087	Fanta Bell	101	0
0088	Warm Pad	90	0
0089	Soft Pad	90	1
0090	Square Pad	90	2
0091	90's Pad	51	2
0092	Space Vox	55	1
0093	Mmh Choir	53	0
0094	Choir Pad	54	1
0095	FlutTape1Dry	74	100
0096	FlutTape1Rev	74	101
0097	FlutTape1Cut	74	102
0098	MaleTape1Dry	53	106
0099	MaleTape1Rev	53	107
0100	MaleTape1Cut	53	108

BRASS / SYNTH			
0101	Full Brass	62	3
0102	Synth Brass	63	0
0103	Poly Brass	63	1
0104	Analog Brass	63	2
0105	Fat Syn Brass	63	3
0106	Trumpet Sect.	57	3
0107	Trumpet	57	2
0108	Horns	61	0
0109	Tenor Sax	67	0
0110	Alto Sax	66	0
0111	Flugelhorn	57	1
0112	Soprano Sax	65	0
0113	Classic Trumpet	57	0
0114	Lucky Lead	83	0
0115	Expressive	83	1
0116	ExpressiveFat	83	2
0117	ExpressiveBell	83	3
0118	Mellow Lyle	83	4
0119	Octave OSC	83	5
0120	Mellow Lead	83	6
0121	Clear Lead	83	7
0122	Saw Solo	83	8
0123	OSC Sync	83	9
0124	Mini Square	83	10
0125	Mini Triangle	83	11
0126	Triangle	83	12
0127	Pure Sine	83	13
0128	Saw Square	83	14
0129	Clear SawSqr	83	15
0130	70's SawSqr	83	16
0131	2600 Pulse 50	83	17
0132	2600 Pulse 20	83	18

Num.	Name	PC	CC00 (MSB)
------	------	----	------------

0133	2600 PulseOD	83	19
0134	Clear PW	83	20
0135	OB Synth 1	81	0
0136	OB Synth 2	81	1
0137	OB Synth 3	81	2
0138	OB Synth 4	81	3
0139	Lyle Lead	81	4
0140	Super Saw	91	1
0141	Synth Lead 1	82	0
0142	Synth Mellow	82	1
0143	Synth Lead 2	82	2
0144	Synth Lead 3	82	3
0145	Synth Lead 4	82	4
0146	Fast Synth	91	2
0147	Poly Saw	91	3
0148	Euro Synth	91	4
0149	Euro Stack	94	0
0150	Poly Chord	94	1
0151	Synth Vox	55	0
0152	Urban Harp	47	1

GUITAR / BASS

0153	Nylon Guitar	25	0
0154	Power GT.	30	1
0155	Muted GT.	30	2
0156	Jazz Guitar	27	0
0157	Rock Bass	35	1
0158	RockSlapBass	38	0
0159	RockSoftSlap	38	1
0160	Elec.Bass	34	2
0161	El.Bass Dark	34	3
0162	Soft Slap Bs	37	0
0163	Hard Slap Bs	37	1
0164	Pop Big Bass	34	4
0165	Pop Bass	34	5
0166	Pop Elec.Bass	34	6
0167	Fat Bass	34	7
0168	Contemp.Bass	34	8
0169	PalmMutingBs	34	9
0170	Old Muted	35	2
0171	Fretless Bass	36	0
0172	Upright Bass	33	7
0173	Pedal Bass	39	5
0174	Pedal DoubleBs	33	5
0175	Modular Bass	39	1
0176	Fat Bass	39	2
0177	Reso Bass	39	3
0178	Big Reso Bass	39	4
0179	FM Bass	40	3
0180	Synth Bass	39	0

Name	PC	CC32 (LSB)	CC00 (MSB)
------	----	------------	------------

SAVED SOUND			
*NAME	1	18	0
*NAME	2	18	0
*NAME	3	18	0
*NAME	...	18	0
*NAME	127	18	0
*NAME	1	18	1
*NAME	2	18	1
*NAME	3	18	1
*NAME	...	18	1
*NAME	127	18	1
*NAME	1	18	2
*NAME	2	18	2
*NAME	3	18	2
*NAME	...	18	2
*NAME	127	18	2
*NAME	...	18	...
...	...	18	...
*NAME	127	18	127

S10 ORGAN Presets List

TW 1 (CCOO/MSB=0, CC32/LSB=1, PC=1)

TW 2 (CCOO/MSB=0, CC32/LSB=1, PC=4)

UPPER PRESET			CC102	LOWER PRESET			CC103	PEDAL PRESET			CC104
0001	00 5320 000		1	0001	00 4545 440		1	0001	73		1
0002	00 4432 000		2	0002	00 4423 220		2	0002	85		2
0003	00 8740 000		3	0003	00 7373 430		3	0003	80		3
0004	00 4544 222		4	0004	00 4544 220		4	0004	08		4
0005	00 5403 000		5	0005	00 6644 322		5	0005	28		5
0006	00 4675 300		6	0006	00 5642 200		6				
0007	00 5645 320		7	0007	00 6845 433		7				
0008	00 6876 540		8	0008	00 8030 000		8				
0009	32 7645 222		9	0009	42 7866 244		9				
0010	88 8000 000		10	0010	60 6000 000		10				
0011	87 8000 456		11	0011	88 00 70 770		11				
0012	88 8800 000		12	0012	83 8000 000		12				
0013	86 8600 008		13	0013	00 4440 000		13				
0014	80 8800 008		14	0014	20 7004 000		14				
0015	87 6543 211		15	0015	00 6620 000		15				
0016	88 5324 588		16	0016	00 7500 000		16				
0017	80 8000 008		17	0017	80 8400 008		17				
0018	88 8233 211		18								
0019	86 4200 357		19								
0020	68 6040 000		20								
0021	88 8604 000		21								
0022	80 0008 888		22								
0023	00 8800 000		23								

FARF (CCOO/MSB=2, CC32/LSB=1, PC=1)

UPPER PRESET			CC102	LOWER PRESET			CC103	PEDAL PRESET			CC104
0001	08 0088 888		1	0001	80 8000 008		1	0001	80		1
0002	80 8000 808		2	0002	08 0000 800		2	0002	88		2
0003	80 8080 808		3	0003	80 8080 008		3				
0004	08 0888 808		4	0004	00 8088 800		4				
0005	08 8880 800		5	0005	00 0880 080		5				

VX (CCOO/MSB=1, CC32/LSB=1, PC=1)

UPPER PRESET			CC102	LOWER PRESET			CC103	PEDAL PRESET			CC104
0001	38 8033 078		1	0001	03 8800 367		1	0001	88 0000 080		1
0002	80 8000 008		2	0002	08 8000 008		2	0002	08 0000 088		2
0003	88 8026 057		3	0003	08 0800 557		3	0003	88 0000 008		3
0004	08 0048 088		4	0004	03 8000 667		4	0004	88 0000 088		4
0005	88 0048 056		5	0005	05 6700 475		5	0005	80 0000 088		5

PIPE (CCOO/MSB=0, CC32/LSB=1, PC=91)

UPPER PRESET			CC102	LOWER PRESET			CC103	PEDAL PRESET			CC104
0001	00 8000 000		1	0001	08 0000 000		1	0001	800		1
0002	08 8000 000		2	0002	88 0000 000		2	0002	880		2
0003	08 8800 000		3	0003	88 8000 000		3	0003	888		3
0004	08 8880 000		4	0004	88 8800 000		4	0004	080		4
0005	88 8888 000		5	0005	88 8808 000		5	0005	808		5

S10 ORGAN Presets List

USER 1 (CC00/MSB=0, CC32/LSB=11, PC=1)

UPPER PRESET			CC102	LOWER PRESET			CC103	PEDAL PRESET			CC104
0001	00 8000 000		1	0001	08 0000 000		1	0001	800 0000 000		1
0002	08 8000 000		2	0002	88 0000 000		2	0002	880 0000 000		2
0003	08 8800 000		3	0003	88 8000 000		3	0003	888 0000 000		3
0004	08 8880 000		4	0004	88 8800 000		4	0004	080 0000 000		4
0005	88 8888 000		5	0005	88 8808 000		5	0005	808 0000 000		5

USER 2 (CC00/MSB=0, CC32/LSB=12, PC=1)

UPPER PRESET			CC102	LOWER PRESET			CC103	PEDAL PRESET			CC104
0001	00 8000 000		1	0001	08 0000 000		1	0001	800 0000 000		1
0002	08 8000 000		2	0002	88 0000 000		2	0002	880 0000 000		2
0003	08 8800 000		3	0003	88 8000 000		3	0003	888 0000 000		3
0004	08 8880 000		4	0004	88 8800 000		4	0004	080 0000 000		4
0005	88 8888 000		5	0005	88 8808 000		5	0005	808 0000 000		5

PIPE ORGAN	
BAROQUE	
PART 1 (UPPER) (MANUAL I)	
Drawb1	BOURDON 16
Drawb2	PRINCIPAL 8
Drawb3	ROHRFLÖTE 8
Drawb4	OCTAVE 4
Drawb5	SUPER OKTAVE 2
Drawb6	MIXTUR IV
Drawb7	VOX HUMANA 8
Drawb8	—
Drawb9	LOWER to UPPER
PART 2 (LOWER)(MANUAL II)	
Drawb1	BOURDON 8
Drawb2	SALICIONAL 8
Drawb3	FLUTE 4
Drawb4	QUINTE 2-2/3
Drawb5	CORNET V
Drawb6	TROMPETE 8
Drawb7	—
Drawb8	—
Drawb9	—
PART 3 (PEDAL)	
Drawb1	SUBBASS 16
Drawb2	OCTAVBASS 8
Drawb3	POSAUNE 16
Drawb4	—
Drawb5	—
Drawb6	—
Drawb7	—
Drawb8	—
Drawb9	—

FARF ORGAN	
PART 1 (UPPER)	
	BASS 16'
	STRINGS 16'
	FLUTE 8'
	OBOE 8'
	TRUMPET 8'
	STRINGS 8'
	FLUTE 4'
	STRINGS 4'
	2 2/3'
PART 2 (LOWER)	
	BASS 16'
	STRINGS 16'
	FLUTE 8'
	OBOE 8'
	TRUMPET 8'
	STRINGS 8'
	FLUTE 4'
	STRINGS 4'
	2 2/3'
PART 3 (PEDAL)	
	16'
	SOFT/SHARP
	—
	—
	—
	—
	—
	—
	—

VX ORGAN	
PART 1 (UPPER)	
	16'
	8'
	4'
	2'
	II
	III
	IV
	∞
	M
PART 2 (LOWER)	
	16'
	8'
	4'
	2'
	II
	III
	IV
	∞
	M
PART 3 (PEDAL)	
	16'
	8'
	—
	—
	—
	—
	—
	∞
	M