

SX8 Tones List

Num.	Name	PC	CC00 (MSB)	Num.	Name	PC	CC00 (MSB)	Num.	Name	PC	CC00 (MSB)
PIANO				PERCUSSIVE							
0001	Italian Live PLT	1	71	0046	Doctor Clav	8	2	0086	Choir Pad	54	1
0002	Italian PLT	1	70	0047	Cool Clav	8	0	0087	FlutTape1Dry	74	100
0003	Italian Classic PLT	1	72	0048	Funky Clav	8	3	0088	FlutTape1Rev	74	101
0004	Italian Bright PLT	1	73	0049	Groovy Clav	8	1	0089	FlutTape1Cut	74	102
0005	Italian Memory PLT	1	74	0050	Wah-Wah Clav	8	4	0090	FemlTape2Dry	53	103
0006	USA Live PLT	1	61	0051	Drive Clav	8	5	0091	FemlTape2Rev	53	104
0007	USA PLT	1	60	0052	Vibraphone	12	0	0092	FemlTape2Cut	53	105
0008	USA Classic PLT	1	62	0053	Marimba	13	0	0093	BoysTapeDry	53	100
0009	USA Bright PLT	1	63	0054	Celesta	9	0	0094	BoysTapeRev	53	101
0010	USA Memory PLT	1	64	ORGAN TW				0095	BoysTapeCut	53	102
0011	VIVO Upright	1	2	More than 100 presets. See next pages.				0096	MaleTape1Dry	53	106
0012	Elec.Grand	3	2					0097	MaleTape1Rev	53	107
0013	E.Grand Trem	3	3	STRINGS				0098	MaleTape1Cut	53	108
0014	Rock Piano	3	1	0055	Easy Strings	50	10	BRASS / SYNTH			
E.PIANO				0056	FastOrchestra	50	4	0099	Full Brass	62	3
0015	EPBell Chorus PLT	5	107	0057	Attack Strings	49	2	0100	Synth Brass	63	0
0016	EPBell Phaser PLT	5	108	0058	Choir Strings	52	1	0101	Poly Brass	63	1
0017	EPBell Tremolo PLT	5	109	0059	Large Strings	50	5	0102	Analog Brass	63	2
0018	EPBell OD PLT	5	110	0060	MellowStrings	50	6	0103	Fat Syn Brass	63	3
0019	EPBell Phr+Trm PLT	5	111	0061	Soft Strings	50	7	0104	Trumpet Sect.	57	3
0020	EPBell Flanger PLT	5	113	0062	5th Strings	50	8	0105	Trumpet	57	2
0021	EPBell HardOD PLT	5	114	0063	Slow Analog	50	9	0106	Horns	61	0
0022	EPBell Bri+Cho PLT	5	115	0064	Orchestra	49	1	0107	Tenor Sax	67	0
0023	EPBell PLT	5	106	0065	80's Strings	52	0	0108	Alto Sax	66	0
0024	70s EP Chorus PLT	5	101	0066	Syn. Strings	51	1	0109	Flugelhorn	57	1
0025	70s EP Phaser PLT	5	102	0067	Pizzicato	46	0	0110	Soprano Sax	65	0
0026	70s EP Tremolo PLT	5	103	0068	Strings Pad	51	0	0111	Classic Trumpet	57	0
0027	70s EP OD PLT	5	104	0069	StrTape1Dry	49	100	0112	Lucky Lead	83	0
0028	70s EP Phr+Trm	5	105	0070	StrTape1Rev	49	101	0113	Expressive	83	1
0029	70s EP Bright PLT	5	116	0071	StrTape1Cut	49	102	0114	ExpressiveFat	83	2
0030	70s EP Bri+Cho PLT	5	117	0072	CiloTape2Dry	43	103	0115	ExpressiveBell	83	3
0031	70s EP Bri+Pha PLT	5	118	0073	CiloTape2Rev	43	104	0116	Mellow Lyle	83	4
0032	70s EP Bri+Tre PLT	5	119	0074	CiloTape2Cut	43	105	0117	Octave OSC	83	5
0033	70s EP PLT	5	100	0075	VlnsTape1Dry	50	100	0118	Mellow Lead	83	6
0034	Dirty EPBell PLT	5	112	0076	VlnsTape1Rev	50	101	0119	Clear Lead	83	7
0035	Dyno Stage	5	0	0077	VlnsTape1Cut	50	102	0120	Saw Solo	83	8
0036	Dyno Trem	5	7	PAD / CHOIR				0121	OSC Sync	83	9
0037	Dyno Bell	5	8	0078	Dexi Heaven	101	1	0122	Mini Square	83	10
0038	Suitcase	5	1	0079	Fanta Bell	101	0	0123	Mini Triangle	83	11
0039	Phaser EP	5	2	0080	Warm Pad	90	0	0124	Triangle	83	12
0040	Wurly	5	5	0081	Soft Pad	90	1	0125	Pure Sine	83	13
0041	Trem.Wurly	5	6	0082	Square Pad	90	2	0126	Saw Square	83	14
0042	Soft E.Piano	5	3	0083	90's Pad	51	2	0127	Clear SawSqr	83	15
0043	Bright E.Piano	5	4	0084	Space Vox	55	1	0128	70's SawSqr	83	16
0044	FM Full Tines	6	0	0085	Mmh Choir	53	0	0129	2600 Pulse 50	83	17
0045	FM E.Piano	6	1					0130	2600 Pulse 20	83	18
								0131	2600 PulseOD	83	19

Num.	Name	PC	CC00 (MSB)
------	------	----	------------

0132	Clear PW	83	20
0133	OB Synth 1	81	0
0134	OB Synth 2	81	1
0135	OB Synth 3	81	2
0136	OB Synth 4	81	3
0137	Lyle Lead	81	4
0138	Super Saw	91	1
0139	Synth Lead 1	82	0
0140	Synth Mellow	82	1
0141	Synth Lead 2	82	2
0142	Synth Lead 3	82	3
0143	Synth Lead 4	82	4
0144	Fast Synth	91	2
0145	Poly Saw	91	3
0146	Euro Synth	91	4
0147	Euro Stack	94	0
0148	Poly Chord	94	1
0149	Synth Vox	55	0
0150	Urban Harp	47	1

GUITAR / BASS

0151	Nylon Guitar	25	0
0152	Power GT.	30	1
0153	Muted GT.	30	2
0154	Jazz Guitar	27	0
0155	Rock Bass	35	1
0156	RockSlapBass	38	0
0157	RockSoftSlap	38	1
0158	Elec.Bass	34	2
0159	El.Bass Dark	34	3
0160	Soft Slap Bs	37	0
0161	Hard Slap Bs	37	1
0162	Pop Big Bass	34	4
0163	Pop Bass	34	5
0164	Pop Elec.Bass	34	6
0165	Fat Bass	34	7
0166	Contemp.Bass	34	8
0167	PalmMutingBs	34	9
0168	Old Muted	35	2
0169	Fretless Bass	36	0
0170	Upright Bass	33	7
0171	Pedal Bass	39	5
0172	Pedal DoubleBs	33	5
0173	Modular Bass	39	1
0174	Fat Bass	39	2
0175	Reso Bass	39	3
0176	Big Reso Bass	39	4
0177	FM Bass	40	3
0178	Synth Bass	39	0

Name	PC	CC32 (LSB)	CC00 (MSB)
------	----	------------	------------

SAVED SOUND			
*NAME	1	18	0
*NAME	2	18	0
*NAME	3	18	0
*NAME	...	18	0
*NAME	127	18	0
*NAME	1	18	1
*NAME	2	18	1
*NAME	3	18	1
*NAME	...	18	1
*NAME	127	18	1
*NAME	1	18	2
*NAME	2	18	2
*NAME	3	18	2
*NAME	...	18	2
*NAME	127	18	2
*NAME	...	18	...
...	...	18	...
*NAME	127	18	127

SX8 ORGAN Presets List

TW 1 (CCOO/MSB=0, CC32/LSB=1, PC=1)

TW 2 (CCOO/MSB=0, CC32/LSB=1, PC=4)

UPPER PRESET			CC102	LOWER PRESET			CC103	PEDAL PRESET			CC104
0001	00 5320 000		1	0001	00 4545 440		1	0001	73		1
0002	00 4432 000		2	0002	00 4423 220		2	0002	85		2
0003	00 8740 000		3	0003	00 7373 430		3	0003	80		3
0004	00 4544 222		4	0004	00 4544 220		4	0004	08		4
0005	00 5403 000		5	0005	00 6644 322		5	0005	28		5
0006	00 4675 300		6	0006	00 5642 200		6				
0007	00 5645 320		7	0007	00 6845 433		7				
0008	00 6876 540		8	0008	00 8030 000		8				
0009	32 7645 222		9	0009	42 7866 244		9				
0010	88 8000 000		10	0010	60 6000 000		10				
0011	87 8000 456		11	0011	88 00 70 770		11				
0012	88 8800 000		12	0012	83 8000 000		12				
0013	86 8600 008		13	0013	00 4440 000		13				
0014	80 8800 008		14	0014	20 7004 000		14				
0015	87 6543 211		15	0015	00 6620 000		15				
0016	88 5324 588		16	0016	00 7500 000		16				
0017	80 8000 008		17	0017	80 8400 008		17				
0018	88 8233 211		18								
0019	86 4200 357		19								
0020	68 6040 000		20								
0021	88 8604 000		21								
0022	80 0008 888		22								
0023	00 8800 000		23								

FARF (CCOO/MSB=2, CC32/LSB=1, PC=1)

UPPER PRESET			CC102	LOWER PRESET			CC103	PEDAL PRESET			CC104
0001	08 0088 888		1	0001	80 8000 008		1	0001	80		1
0002	80 8000 808		2	0002	08 0000 800		2	0002	88		2
0003	80 8080 808		3	0003	80 8080 008		3				
0004	08 0888 808		4	0004	00 8088 800		4				
0005	08 8880 800		5	0005	00 0880 080		5				

VX (CCOO/MSB=1, CC32/LSB=1, PC=1)

UPPER PRESET			CC102	LOWER PRESET			CC103	PEDAL PRESET			CC104
0001	38 8033 078		1	0001	03 8800 367		1	0001	88 0000 080		1
0002	80 8000 008		2	0002	08 8000 008		2	0002	08 0000 088		2
0003	88 8026 057		3	0003	08 0800 557		3	0003	88 0000 008		3
0004	08 0048 088		4	0004	03 8000 667		4	0004	88 0000 088		4
0005	88 0048 056		5	0005	05 6700 475		5	0005	80 0000 088		5

PIPE (CCOO/MSB=0, CC32/LSB=1, PC=91)

UPPER PRESET			CC102	LOWER PRESET			CC103	PEDAL PRESET			CC104
0001	00 8000 000		1	0001	08 0000 000		1	0001	800		1
0002	08 8000 000		2	0002	88 0000 000		2	0002	880		2
0003	08 8800 000		3	0003	88 8000 000		3	0003	888		3
0004	08 8880 000		4	0004	88 8800 000		4	0004	080		4
0005	88 8888 000		5	0005	88 8808 000		5	0005	808		5

S10 ORGAN Presets List

USER 1 (CC00/MSB=0, CC32/LSB=11, PC=1)

UPPER PRESET			CC102	LOWER PRESET			CC103	PEDAL PRESET			CC104
0001	00 8000 000		1	0001	08 0000 000		1	0001	800 0000 000		1
0002	08 8000 000		2	0002	88 0000 000		2	0002	880 0000 000		2
0003	08 8800 000		3	0003	88 8000 000		3	0003	888 0000 000		3
0004	08 8880 000		4	0004	88 8800 000		4	0004	080 0000 000		4
0005	88 8888 000		5	0005	88 8808 000		5	0005	808 0000 000		5

USER 2 (CC00/MSB=0, CC32/LSB=12, PC=1)

UPPER PRESET			CC102	LOWER PRESET			CC103	PEDAL PRESET			CC104
0001	00 8000 000		1	0001	08 0000 000		1	0001	800 0000 000		1
0002	08 8000 000		2	0002	88 0000 000		2	0002	880 0000 000		2
0003	08 8800 000		3	0003	88 8000 000		3	0003	888 0000 000		3
0004	08 8880 000		4	0004	88 8800 000		4	0004	080 0000 000		4
0005	88 8888 000		5	0005	88 8808 000		5	0005	808 0000 000		5

PIPE ORGAN	
BAROQUE	
PART 1 (UPPER) (MANUAL I)	
Drawb1	BOURDON 16
Drawb2	PRINCIPAL 8
Drawb3	ROHRFLÖTE 8
Drawb4	OCTAVE 4
Drawb5	SUPER OKTAVE 2
Drawb6	MIXTUR IV
Drawb7	VOX HUMANA 8
Drawb8	—
Drawb9	LOWER to UPPER
PART 2 (LOWER)(MANUAL II)	
Drawb1	BOURDON 8
Drawb2	SALICIONAL 8
Drawb3	FLUTE 4
Drawb4	QUINTE 2-2/3
Drawb5	CORNET V
Drawb6	TROMPETE 8
Drawb7	—
Drawb8	—
Drawb9	—
PART 3 (PEDAL)	
Drawb1	SUBBASS 16
Drawb2	OCTAVBASS 8
Drawb3	POSAUNE 16
Drawb4	—
Drawb5	—
Drawb6	—
Drawb7	—
Drawb8	—
Drawb9	—

FARF ORGAN	
PART 1 (UPPER)	
BASS 16'	
STRINGS 16'	
FLUTE 8'	
OBOE 8'	
TRUMPET 8'	
STRINGS 8'	
FLUTE 4'	
STRINGS 4'	
2 2/3'	
PART 2 (LOWER)	
BASS 16'	
STRINGS 16'	
FLUTE 8'	
OBOE 8'	
TRUMPET 8'	
STRINGS 8'	
FLUTE 4'	
STRINGS 4'	
2 2/3'	
PART 3 (PEDAL)	
16'	
SOFT/SHARP	
—	
—	
—	
—	
—	
—	
—	
—	

VX ORGAN	
PART 1 (UPPER)	
16'	
8'	
4'	
2'	
II	
III	
IV	
N	
M	
PART 2 (LOWER)	
16'	
8'	
4'	
2'	
II	
III	
IV	
N	
M	
PART 3 (PEDAL)	
16'	
8'	
—	
—	
—	
—	
—	
N	
M	