

# S1 Tone List

Num.	Name	PC	CC00
------	------	----	------

## PIANO

0001	VIVO Grand	2	0
0002	Pop Grand	2	1
0003	VIVO Live	2	2
0004	VIVO Upright	1	2
0005	Classic Grand	1	0
0006	Romantic	1	1
0007	Elec.Grand	3	2
0008	E.Grand Trem	3	3
0009	Rock Piano	3	1
0010	Ragtime	4	0
0011	Honky Tonk	4	1
0012	Harpsi 8'	7	0
0013	Harpsi 4'	7	1
0014	Coupled Hps.	7	2
0015	Pop Harpsi	7	3

## E. PIANO

0016	Dyno Stage	5	0
0017	Suitcase	5	1
0018	Phaser EP	5	2
0019	Wurly	5	5
0020	Trem.Wurly	5	6
0021	Soft E.Piano	5	3
0022	Bright E.Piano	5	4
0023	FM Full Tines	6	0
0024	FM E.Piano	6	1
0025	Cool Clav	8	0
0026	Groovy Clav	8	1
0027	Doctor Clav	8	2
0028	Funky Clav	8	3

## ORGAN

0029	Jazz Organ	18	0
0030	Blues Organ	18	1
0031	Reggae Organ	17	0
0032	R&B Organ	17	1
0033	Pop Organ	17	2
0034	Rock Organ	19	0
0035	Gospel Organ	19	1
0036	Principal	20	0
0037	Princip&Flute	20	1
0038	Church	20	2
0039	Mixture	20	3

## ENSEMBLE

0040	Slow Strings	50	0
0041	Strings	50	1
0042	Fast Strings	49	0

Num.	Name	PC	CC00
------	------	----	------

0043	Strings Ens.	50	2
0044	Orchestra	49	1
0045	Dark Strings	50	3
0046	Strings Pad	51	0
0047	Syn. Strings	51	1
0048	80's Strings	52	0
0049	Classic Choir	53	1
0050	Space Vox	55	1
0051	Mmh Choir	53	0
0052	Choir Pad	54	1
0053	Synth Vox	55	0
0054	Warm Pad	90	0
0055	Dark Pad	54	0
0056	Soft Pad	90	1
0057	Square Pad	90	2
0058	Fanta Bell	101	0
0059	Dexi Heaven	101	1
0060	Brass Sect.	62	0
0061	Brass Ens.	62	1
0062	Synth Brass	63	0
0063	Poly Brass	63	1
0064	Poly Synth	91	0
0065	Super Saw	91	1
0066	Fast Synth	91	2

## (MORE)

0067	Vibraphone	12	0
0068	Marimba	13	0
0069	Celesta	9	0
0070	Harp	47	0
0071	Xilophone	14	0
0072	Nylon Guitar	25	0
0073	Steel Guitar	26	0
0074	Jazz Guitar	27	0
0075	Overdrive GT.	30	0
0076	Acoustic Bs.	33	0
0077	Fingered Bs.	34	0
0078	Picked Bs.	35	0
0079	Ac.Bass&Ride	33	1
0080	Synth Bass	39	0