

VIVOSX7 Tone List

Num.	Name	PC	CC00
------	------	----	------

PIANO

0001	VIVO Grand	2	0
0002	Pop Grand	2	1
0003	VIVO Live	2	2
0004	Classic Grand	1	0
0005	VIVO Upright	1	2
0006	Romantic	1	1
0007	Ragtime	4	0
0008	Honky Tonk	4	1
0009	Elec. Grand	3	2
0010	E. Grand Trem	3	3
0011	Rock Piano	3	1

E. PIANO

0012	Dyno Stage	5	0
0013	Suitcase	5	1
0014	Phaser EP	5	2
0015	Wurly	5	5
0016	Trem. Wurly	5	6
0017	Soft E. Piano	5	3
0018	Bright E. Piano	5	4
0019	FM Full Tines	6	0
0020	FM E. Piano	6	1

PERCUSSIVE

0021	Cool Clav	8	0
0022	Groovy Clav	8	1
0023	Doctor Clav	8	2
0024	Funky Clav	8	3
0025	Vibraphone	12	0
0026	Celesta	9	0
0027	Xylophone	14	0
0028	Marimba	13	0
0029	Coupled Hps.	7	2
0030	Harpsi 8'	7	0
0031	Harpsi 4'	7	1
0032	Pop Harpsi	7	3
0033	Harp	47	0

ORGAN

0034	Jazz Organ	18	0
0035	Blues Organ	18	1
0036	Reggae Organ	17	0
0037	R&B Organ	17	1
0038	Rock Organ	19	0
0039	Gospel Organ	19	1
0040	Pop Organ	17	2
0041	Principal	20	0
0042	Princip&Flute	20	1

Num.	Name	PC	CC00
------	------	----	------

0043	Church	20	2
0044	Mixture	20	3

STRINGS

0045	Slow Strings	50	0
0046	Strings	50	1
0047	Fast Strings	49	0
0048	Strings Ens.	50	2
0049	Orchestra	49	1
0050	Dark Strings	50	3
0051	Strings Pad	51	0
0052	Syn. Strings	51	1
0053	80's Strings	52	0

PAD/CHOIR

0054	Warm Pad	90	0
0055	Soft Pad	90	1
0056	Square Pad	90	2
0057	Mmh Choir	53	0
0058	Dark Pad	54	0
0059	Classic Choir	53	1
0060	Choir Pad	54	1
0061	Synth Vox	55	0
0062	Space Vox	55	1

BRASS/SYNTH

0063	Brass Sect.	62	0
0064	Brass Ens.	62	1
0065	Synth Brass	63	0
0066	Poly Brass	63	1
0067	Fanta Bell	101	0
0068	Dexi Heaven	101	1
0069	Poly Synth	91	0
0070	Super Saw	91	1
0071	Fast Synth	91	2

GUITAR/BASS

0072	Nylon Guitar	25	0
0073	Steel Guitar	26	0
0074	Jazz Guitar	27	0
0075	Overdrive GT.	30	0
0076	Acoustic Bs.	33	0
0077	Fingered Bs.	34	0
0078	Picked Bs.	35	0
0079	Ac. Bass&Ride	33	1
0080	Synth Bass	39	0

USER
