

DEXIBELL

VIVO | SX8 |

digital piano module

Quick Guide



HANDMADE
IN ITALY

Regulatory and Safety Information

Users in U.S.A

This product has been tested and found to comply with the limits for a Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference; and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION: Any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Radiation Exposure Statement

This product complies with the US portable RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual. Further RF exposure reduction can be achieved if the product is kept as far as possible from the user body or is set to a lower output power if such function is available.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Users in Canada

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radiation Exposure Statement

The product complies with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The minimum separation distance for portable use is limited to 15mm assuming use of antenna with 2 dBi of gain. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé. La distance de séparation minimale pour l'utilisation portative est limitée à 15mm en supposant l'utilisation de l'antenne avec 2 dBi de gain. Le produit est sûr pour un fonctionnement tel que décrit dans ce manuel. La réduction aux expositions RF peut être augmentée si l'appareil peut être conservé aussi loin que possible du corps de l'utilisateur ou que le dispositif est réglé sur la puissance de sortie la plus faible si une telle fonction est disponible.

Users in EU

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

This device complies with the essential requirements of the 2014/53/EU – Radio Equipment Directive (RED). The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the 2014/53/EU – Radio Equipment Directive (RED):

- EN 62368-1:2014/A11:2017
Safety requirements for audio/video, information, and technology equipment
- EN 300 328 v2.2.2 (2019-07)
Wideband transmission systems; Data transmission equipment operating in the 2,4 GHz band; Harmonized Standard for access to radio spectrum
- EN 62311:2008 | EN 50385:2017
RF exposure
- EN 301 489-1 v2.2.0 (2017-03)
Electromagnetic compatibility and Radio Spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements
- EN 301 489-17 V3.2.0 (2017-03)
Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2,4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment
- EN 301 893 v2.1.1 (2017-05)
5 GHz RLAN; Harmonized Standard covering the essential requirements of article 3.2 of Directive 2014/53/EU
- EU 2015/863 (RoHS 3)
Declaration of Compliance – EU Directive 2015/863; Reduction of Hazardous Substances (RoHS)

VIVO | SX8 |

digital piano module

Quick Guide

Welcome to the quick guide of VIVO SX8 and congratulations to purchasing this Sound Module.

VIVO SX8 is the Sound Module of Dexibell's new VIVO PREMIUM digital piano series.

A realism never heard before, thanks to the latest technology managed of a most powerful processor equipped with 3.2 GB size of memory for sounds.

All sounds was recorded with **holophonic** method for an amazing 3D listening experience and reproduced using the new technology called **T2L (True to Life)**, based on interaction between Sampling and Modelling methods. Moreover, the sound quality has been raised-up to **24 bit - 48KHz** with an average of 5 times longer ever recorded samples (15" on lower piano notes).

VIVO SX8 reproduces a real acoustic piano also thanks to unlimited notes polyphony (320 oscillators).

The real sustain pedal simulation is designed for good-feeling response, and allows subtle performance nuances to be expressed.

Moreover, an organ section with many effects as rotary , percussion, vibrato, chorus, allows you to enjoy full-fledged organ sounds in your performances.

Reading this manual you will discover many other features such as sympathetic resonances, harmonics, noises, staccato sounds, timbre variances, etc, etc.

To ensure that you obtain the maximum enjoyment and take full advantage of the piano functionality, please read all sections of the complete owner's manual carefully (It is downloadable from the dexibell web site).

Keep this manual handy for future reference.



Start to take advantage of valuable benefits available simply registering your product on www.dexibell.com.

- You can benefit of DEXIBELL's **3 years** extended warranty (*The extended warranty is subject to terms and conditions. Please refer to the related section*).
- You can download the full version of the owner's manual.
- Keeps you updated on special offers.
- You can be updated on any new software release and new sounds.

1 Important Safety Instruction

PLEASE READ CAREFULLY BEFORE PROCEEDING

Always follow the following precaution listed below to avoid user to the risk of serious injury or even death from electrical shock, fire or other hazard .



WARNING

Only use non-tropical weather

This unit and its AC adaptor can only be safely used in non-tropical weather. The operating temperature range is 5° - 40°C (41° - 104°F).



Do not repair, modify or replace parts by yourself

Do not attempt to repair the unit, modify or replace parts of the product. Please contact all the nearest Dexibell Service Center.



Do not disassemble or modify by yourself

Do not open the unit or its AC adaptor or attempt to disassemble or modify the internal component in any way.



Use only the supplied AC adaptor (DEXIBELL DYS624-120200W).

Use only the AC adaptor included with the unit. Connecting a different AC adaptor can cause serious damage to the internal circuitry and may even pose a shock hazard.



Use only the supplied power cord

Use only the AC power cord supplied with the AC adaptor included in the package.



Do not excessively bend the power cord

Do not excessively twist or bend the power cord otherwise you damage it. Damaged cords may cause fire and shock hazards!



Do not place the unit in an unstable location

Do not place the unit in a unstable position where it might accidentally fall over.



Take care not to allow liquid or foreign objects to enter unit; Do not place containers with liquid on unit

Do not place object filled with liquid (glass of water on this product. Never allow foreign objects (e.g., flammable objects, coins, wires) or liquids (e.g., water or juice) to enter this product. Doing so may cause short circuits, faulty operation, or other malfunctions.



Never place or store the product in the following types of locations

- Exposed to extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day).
- Subject to steam or smoke.
- Damp (such washroom, baths, on wet floors).
- Subject to salt water exposure.
- Exposed to rain.
- Dusty or sandy.
- Subject to extreme changes of temperature or humidity (The condensation may occur and water may collect on the surface of the instrument. Wooden parts may absorb water and be damaged).
- Subject to high levels of vibration and shakiness.



Do not drop the unit or subject it to strong impact

Do not drop the unit. Protect it from strong impact!



Do not connect the unit to an outlet with an unreasonable number of other devices

Do not connect the unit's power-supply cord to an electrical outlet with an unreasonable number of other devices. This could cause the outlet to overheat and possibly cause a fire.



Adults must provide supervision in places where children are present

When using the unit in locations where children are present, never leave the unit unattended. Keep a special watch over any children so that they don't mishandling of the unit can take place.



Avoid extended use at high volume

This unit, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. DO NOT operate for a long period of time at a high volume level, or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should immediately stop using the unit, and consult an audiologist.



If you notice any abnormality turn off the unit immediately

- Turn off the unit and remove the AC adaptor from the outlet when:
- If the AC adaptor, the power-supply cord, or the plug has been damaged.
- If smoke or unusual smells occurs.
- If the product has been exposed to rain.
- If objects have fallen into, or liquid has been spilled into the unit.
- If the unit does not operate or exhibits a marked change in performance.
- If the unit has been dropped, or the enclosure of the product has been damaged.



Contact the nearest qualified Service Center.



CAUTION

Grasp the plug connecting or disconnecting the AC adaptor

When removing the electric plug from the instrument or an outlet, always hold the plug itself and not the cord. Pulling by the cord can damage it.



Do not use wet hands to connect or disconnect AC adaptor

Never handle the AC adaptor or its plugs with wet hands when plugging into, or unplugging from, an electrical outlet.



Keep clean the AC adaptor's plug

At regular intervals, unplug the AC adaptor and using a dry cloth clean the adaptor's plug.



If the unit will be unused for an extended period of time, unplug the AC power cord from the AC outlet.

Keep cables from getting entangled

Try to prevent cords and cables from becoming entangled. Place all cords and cables away from children.



Before cleaning the unit, unplug the AC adaptor from the outlet

To avoid electric shock or damage the unit, before cleaning the unit, turn it off and unplug the AC adaptor from the outlet (p. 8).



If there is a possibility of lightning strike in your area, disconnect the AC adaptor from the outlet

If you know a thunderstorm is predicted in your area, disconnect the AC adaptor from the outlet.



Do not rest your weight on or place heavy objects on the unit.

Avoid to climb on top of, nor place heavy objects on the unit.



Place in a well ventilated location

The unit and the AC adaptor should be located so their location or position does not interfere with their proper ventilation.



Do not use in tropical climates

Use the unit and the AC adaptor only in a moderate climates (not in tropical climates).



Place near the socket outlet

This equipment should be installed near the socket outlet and disconnection of the device should be easily accessible.



Conventions Used in This Manual

The following symbols are used.

NOTE

It indicates an important note; be sure to read it.

MEMO

It indicates a memo regarding the setting or function; It's up to you read it.

TIPS

It indicates a useful hint for operation; read it as necessary.



This Symbol indicates that in EU countries, this product must be collected separately from household waste, as defined in each region. Products bearing this Symbol must not be discarded together with household waste.

For European Countries

In addition to the items listed under "Important Safety Instruction" on p. 4, please read and observe the following:



Power supply related

- Do not plug this unit into the same electrical outlet used same by an electrical appliance that is controlled by an inverter or a motor (such as a refrigerator, washing machine or air conditioner). Doing so, can result an audible noise.
- The power adaptor may become warm after long hours of consecutive use. It can be a normal dissipation of heat through the adaptor casing. To reduce the possibility of overheating place the power adaptor on the floor in a well-ventilated location.
- Before connecting the unit to other equipment, turn off the power to all equipment. Otherwise, electrical shock or damage to the equipment may occur.
- If the unit is not operative for 120 minutes, to prevent unnecessary power consumption, this unit features an "AUTO OFF" function that automatically turns the unit off. If you don't want the unit to turn off automatically, change the "AUTO OFF" setting to "OFF".

NOTE

The "AUTO OFF" setting is memorized when you switch off the unit.



Related to external memories

- Insert the USB Memory (commercially available) into the slot with care and at the correct angle.
- Take particular care when handling USB Memory:
 - Always ground yourself to something metal before handling an USB Memory.
 - Do not touch the pins of the USB Memory connector, or allow them to become dirty.
 - Do not subject the USB Memory to temperature extremes (e.g., direct sunlight in an enclosed vehicle).
 - Do not allow the USB Memory to become wet.
 - Do not drop or subject it to excessive shock or vibration.
- Do not disconnect the USB Memory while writing and reading data (i.e., while the USB Memory indicator blinks).
- This unit allows you to use commercially available USB Memory. You can purchase such devices at a computer store, a digital camera dealer, etc.



Related to appropriate location

- Do not place the unit near power amplifiers (or other equipment containing large power transformers) to avoid induced hum. In case of hum, to reduce the problem, change the orientation of your unit or place it away from the source of interference.
- Do not use this unit in the vicinity of a TV or radio. This unit may interfere with radio and television reception.
- When using this unit along with application on your iPhone/iPad, we recommend that you set "Airplane Mode" to "ON" on your iPhone/iPad in order to avoid noise caused by communication.
- Noise may be produced if cell phones are operated in the vicinity of this unit. In case of noise you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- Do not expose the unit to extreme cold or heat, to direct sunlight or near devices that radiate heat. Do not leave the unit inside an vehicle during the day. Extreme temperature can damage the unit.
- Take care when move the unit from one location to another with drastic changes in ambient temperature. Condensation can occur in the unit due to drastic change of temperature. Using the device while condensation is present can cause damage. If there is reason to believe that condensation might have occurred, leave the device for several hours until the condensation has completely dried out.
- Do not place, for long periods of time, vinyl, plastic or rubber objects on this unit. Such objects can discolor or otherwise harmfully affect the finish.
- Do not place objects for long period of time on top of the keyboard. This can be the cause of malfunction of the keys of the keyboard.
- Do not apply any stickers, decals or self-adhesive material to this unit. The glue is difficult to remove and solvents are damaging the exterior finish.
- Do not place object filled with liquid (glass of water on this unit. Avoid to use alcohol, perfume, hairspray, nail polish, etc., near the unit. In the event of liquid spill on the unit, swiftly wipe away the surface using a dry, soft cloth.



Other precautions

- The contents of memory could be lost due to malfunction or improper operation. To help prevent the loss of your data, we highly recommend that you periodically save a backup copy of important data you have stored in the unit's memory on another storage device. (e.g., USB memories).
- Unfortunately, an error may occur during the data restore previously stored in the USB memories. Dexibell shall not be liable for loss of profits or any consequential loss, loss of data.
- Do not use excessive force when handling unit's buttons, switches, sliders and controls and when use connectors and jacks. Rough handling can cause damage o malfunctions.
- Do not to apply strong pressure on the display.
- Always pull by the connector when disconnecting a cable, never pull the cable. Not doing so you will cause shorts, or damage to the cable's internal elements.
- Keep the unit's volume levels down. The instrument should be used at a reasonable volume, to avoid disturbing neighbours, especially at night and in the early morning. Use headphones if you want to play your music loud or late at night.
- When you need to transport the unit, put it in its original packaging with padding in the box. Otherwise, you will need to use equivalent packaging materials. When transporting or moving the unit always use two or more people.
- For connecting this unit use cable low impedance cables. The use of cables that contain resistor can cause the sound level to be extremely low, or impossible to hear.



Maintenance related

- To clean the unit, put a soft cloth in lukewarm water, squeeze it well, then wipe the entire surface using an equal amount of strength. Rubbing too hard in the same area can damage the finish.
- Do not wipe this unit with benzene, alcohol or solvent of any kind. Doing so may result in discoloration and/or deformation of the unit.



Related to repairs

- Always back up your data on a USB memories before you send this unit for repair to an authorized center. All data contained in the unit's memory may be lost. Important data should always be backed up, or written down on paper (when possible). Dexibell assumes no liability concerning such loss of data.



Related to copyright and trademarks

- Dexibell do not assume legal liability regarding any infringements of the user through the use of this unit.
- Recording, copying, distribution of copyrighted material (songs, live performance, etc.) belonging to a third party in part or in whole without the permission of the copyright owner is forbidden by law.
- Copyright © 2003 by Bitstream, Inc. All rights reserved. Bitstream Vera is a trademark of Bitstream, Inc.
- iPad® and iPhone® are registered trademarks of Apple Inc.
- App Store™ is an Apple's Service Mark.
- Bluetooth® is registered trademarks of Bluetooth SIG, Inc.

3 Panel Description



Turns the power on or off (p. 8).

With the factory settings VIVO SX8's power will automatically be switched off 120 minutes after you stop playing or operating the VIVO SX8.

If VIVO SX8's power has been turned off automatically, you can use the [POWER] switch to turn the VIVO SX8 back on. If you don't want the power to turn off automatically, set the "AUTO OFF" parameter to "OFF".

NOTE

To avoid malfunctions, never disconnect the AC/DC adaptor while the instrument is turned on.

2 USB Memory Port

- You can connect a commercially available USB Memory to save or load Memories, Sound Set and other data (p. 8).
- Using an A→B-type cable, you can connect keyboards from any brand directly to this port to exchange MIDI data without a computer and without using two MIDI cables (p. "Main Connections" (p. 14).

NOTE

- * Carefully insert the USB Memory or a USB cable making sure that the connector on the device is appropriate and that it is connected in the proper direction.
- * Dexibell does not recommend using USB hubs, irrespective of whether they are active or passive.

3 Arrow buttons

These buttons are used to navigate around the various menus and adjust values.

4 Function buttons

These buttons are used to select one of three functions/options shows at the bottom of the display. Press the first and the last Function button to listen the demo song.

- 5 This display shows information related to your operation.

The last row of the display shows the functions that you can recall pressing one of three buttons below the display.

6 MENU/EXIT

This button allows you to open and close the menu page where you can view and select all available functions.

7 MEMORY/WRITE button

This button allows you to shows the list of memories and then recall one of them.

Pressing and holding this button to write a memory.

8 SOUND

By this button you can change the sound of the currently selected part. The tone list is displayed.

9 PHONES output

This is where you can connect a pair of optional headphones.

10 DATA ENTRY

Use it to edit values or scroll through a list.

11 VOLUME

Use this knob to set VIVO SX8's overall volume.

12 Rack-mount bracket

Use these when installing the VIVO SX8 in a 19-inch rack.

For details on how to install the VIVO SX8 in a rack, refer to the owner's manual included with the rack you're using.

Rear Side



13 DC IN socket

Connect the supplied AC/DC adaptor here (p. 8).

14 Ground terminal

Depending on the circumstances of a particular setup, you could feel a tingling sensation at the point where you touch this device.

You can eliminate this sensation connecting the ground terminal with an external ground. For details see the owner's manual.

15 Cable clamp

Use this to secure the AC adaptor cord (p. 8).

16 UNBALANCED MAIN/SUB OUTPUT R, L/MONO sockets

These TS sockets allow you to connect powered speakers or amp (p. 10). All parts of the instrument can be routed to the different outputs (MAIN or SUB) as desired. You can set this output as MAIN (default) or SUB. For details see the owner's manual.

17 BALANCED OUTPUT R, L sockets

These XLR sockets allow you to connect mixer, powered speakers or amp (p. 10). This output is always works as MAIN.

18 DAMPER PEDAL

Use this pedal to sustain the sound.

NOTE

We suggest to connect at this socket a continuous pedal controller as the Dexibell CPI pedal. In this way you can appreciate all the musical nuances of a continuous controller.

19 ASSIGN PEDAL (EXPRESSION)

Connecting a commercially available pedal to this socket allows you to control an assignable function by foot.

This socket recognize an expression pedal connected setting automatically the Expression function, regardless of the current function assigned.

20 MIDI THRU/IN sockets

You can connect the IN socket to the OUT socket of a MIDI keyboard. See p. 14.

Thanks to the MIDI THRU socket you can cascade several devices in a MIDI chain.

21 USB Computer (AUDIO/MIDI) Port

 
Use an A→B-type USB cable to connect the VIVO SX8 to your computer via this port (p. 14). You'll be able to use your AUDIO/MIDI DAW software to record and play audio data.

The VIVO SX8 can transmit/receive MIDI messages and audio streaming at 24 bit 48 KHz.

Connecting the AC Adaptor

The VIVO SX8 is an electronic instrument that requires some form of electrical power. You can power your VIVO SX8 using the supplied adaptor.

1. Rotate the [VOLUME] knob counterclockwise to minimize the volume.
2. Connect the AC adaptor to VIVO SX8's DC IN jack positioned to the rear bottom panel.

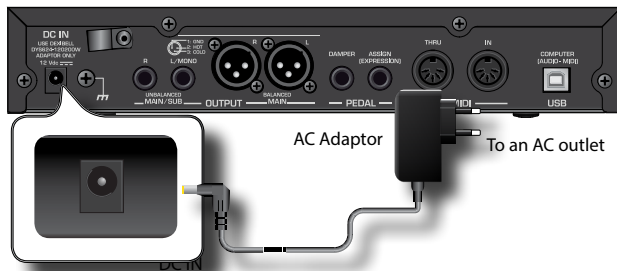

NOTE

Be sure to use only the AC adaptor (DEXIBELL DYS624-120200W, supplied with the unit). Also, make sure the line voltage at the installation matches the input voltage specified on the AC adaptor body. Other AC adaptors may use a different polarity, or be designed for a different voltage, so their use could result in damage, malfunction, or electric shock.

NOTE

If you won't be using the VIVO SX8 for an extended period of time, disconnect the power cord from the electrical outlet.

 
NOTE

To avoid malfunctions, never disconnect the AC/DC adaptor while the instrument is turned on.

3. Plug the AC Adaptor into a power outlet.

Secure the AC Adaptor

To avoid accidental disconnects of the power connector, secure the cable to the clamp.

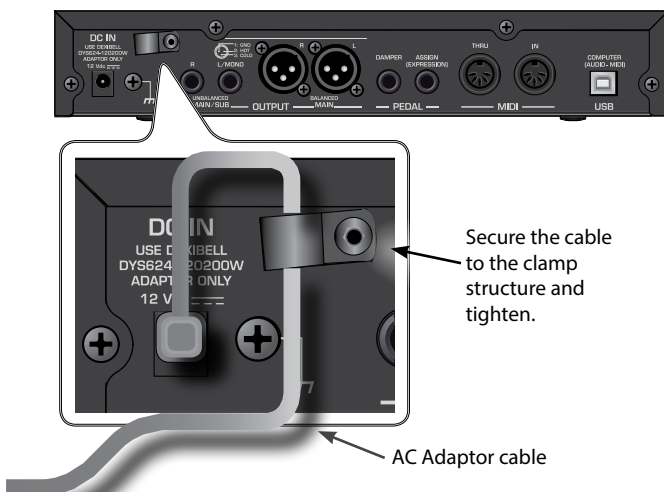

Connecting an USB Memory (commercially available)

1. Plug an USB Memory to the MEMORY port on the VIVO SX8's panel.



NOTE

Carefully insert the USB Memory making sure that the connector on the device is appropriate and that it is connected in the proper direction.

NOTE

The VIVO SX8 supports all USB memory (FAT 32 formatted). Anyway, because there are so many USB memory on the market and it is almost impossible to check all types of memories, it could happen that a memory is not compatible with your instrument.

NOTE

If you need to format your USB memory, please refer to the owner's manual of VIVO SX8.

Safely Remove the USB Memory

NOTE

You should always safely eject the USB Memory before physically unplugging it from USB socket. Before to unplug the USB Memory use the "USB REMOVE" function.

1. Press the [MENU/EXIT] button.
2. Use the [▲] [▼] buttons to select the "USB MEMORY" functions group and press the [▶] button to access them.



3. Use the [▲] [▼] buttons to select "REMOVE" and press the [EXECUTE] Function button to access the function.
4. Press the "YES" Function button to safely remove the USB Memory.

Now you can unplug the USB Memory safely.

Turning the Power On/Off

 
Once everything is properly connected, be sure to follow the procedure below to turn on their power.

1. Rotate the [VOLUME] knob counterclockwise to minimize the volume.

NOTE

Before turning the VIVO SX8 on/off, always be sure to turn the volume down. Even with the volume turned down, you might hear some sound when switching the VIVO SX8 on/off. However, this is normal and does not indicate a malfunction.


2. Press the VIVO SX8's [] button located on the right panel to switch it on.

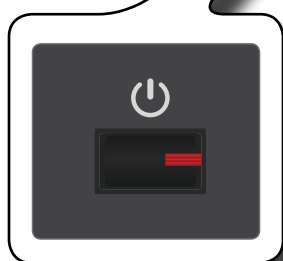

The power will turn on, a progress bar appear in the VIVO SX8's display.



 After a brief interval, the main page will appear. and VIVO SX8 will be ready to produce sound.

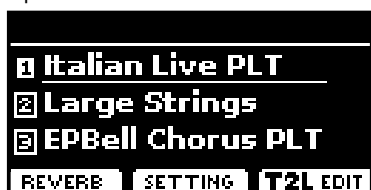

3. Use the [VOLUME] knob to adjust the volume.

NOTE

This unit is equipped with a protection circuit. A brief interval (a few seconds) after power up is required before the unit will operate normally.

Turning the Power Off

 
1. Rotate the [VOLUME] knob counterclockwise to minimize the volume.

NOTE

To avoid malfunctions, never disconnect the AC/DC adaptor while the instrument is turned on.

2. Press the VIVO SX8's [] switch.

A power off confirmation message appears:

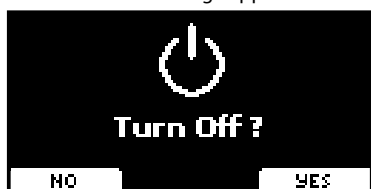

3. Press the "YES" Function button to confirm.

The display shows the following message:



and the unit will turn off after few seconds.

If you do not want power off press the "NO" Function button.

NOTE

If you need to turn off the power completely, first turn off the [] button, then unplug the power cord from the power outlet. Refer to "Connecting the AC Adaptor" (p. 8).

If you do not operate the unit for a certain period of time while the power is on, this unit turns off automatically.

If you don't want the power to turn off automatically, turn the "AUTO OFF" setting off !

With the factory settings, the unit's power will automatically be switched off 120 minutes after you stop playing or operating the unit.

 
Shortly before the VIVO SX8 shuts down automatically, the display starts counting down the seconds. If you want to keep using the VIVO SX8 at this stage, press any button.

If you don't want the power to turn off automatically, change the "AUTO OFF" setting to "OFF".

Demo of the VIVO SX8

Your VIVO SX8 contains a demo that introduces all the best of its tones.

1. Simultaneously press the first and the last Function button.

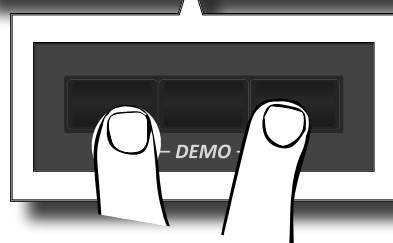

Playback starts automatically with the demo song.

2. Press the [MENU/EXIT] button to leave the demo function.

 
NOTE

All rights reserved. Unauthorized use of this material for purposes other than private, personal enjoyment is a violation of applicable laws.


5

Examples of Connections

Basic Connection

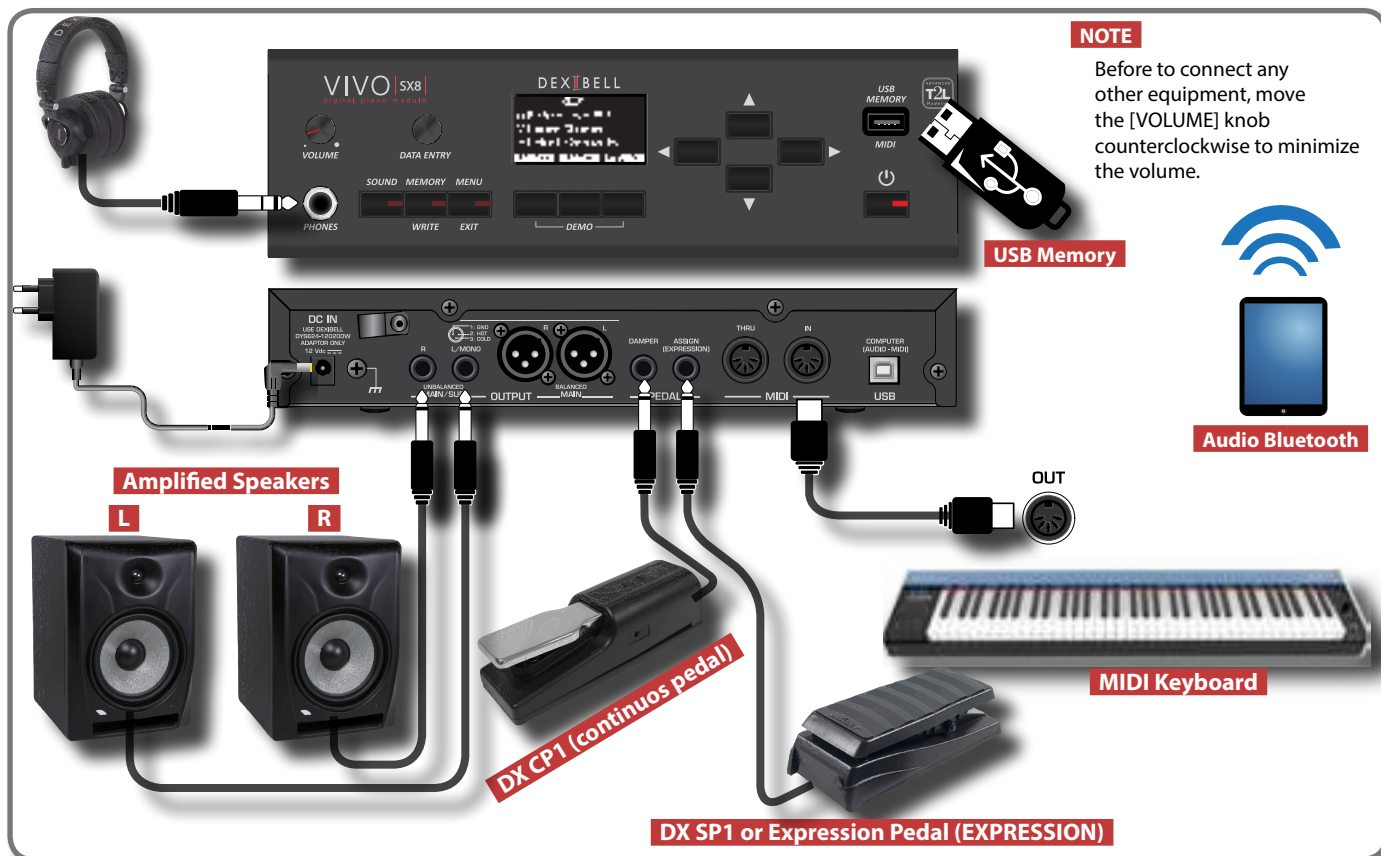

Studio Connection

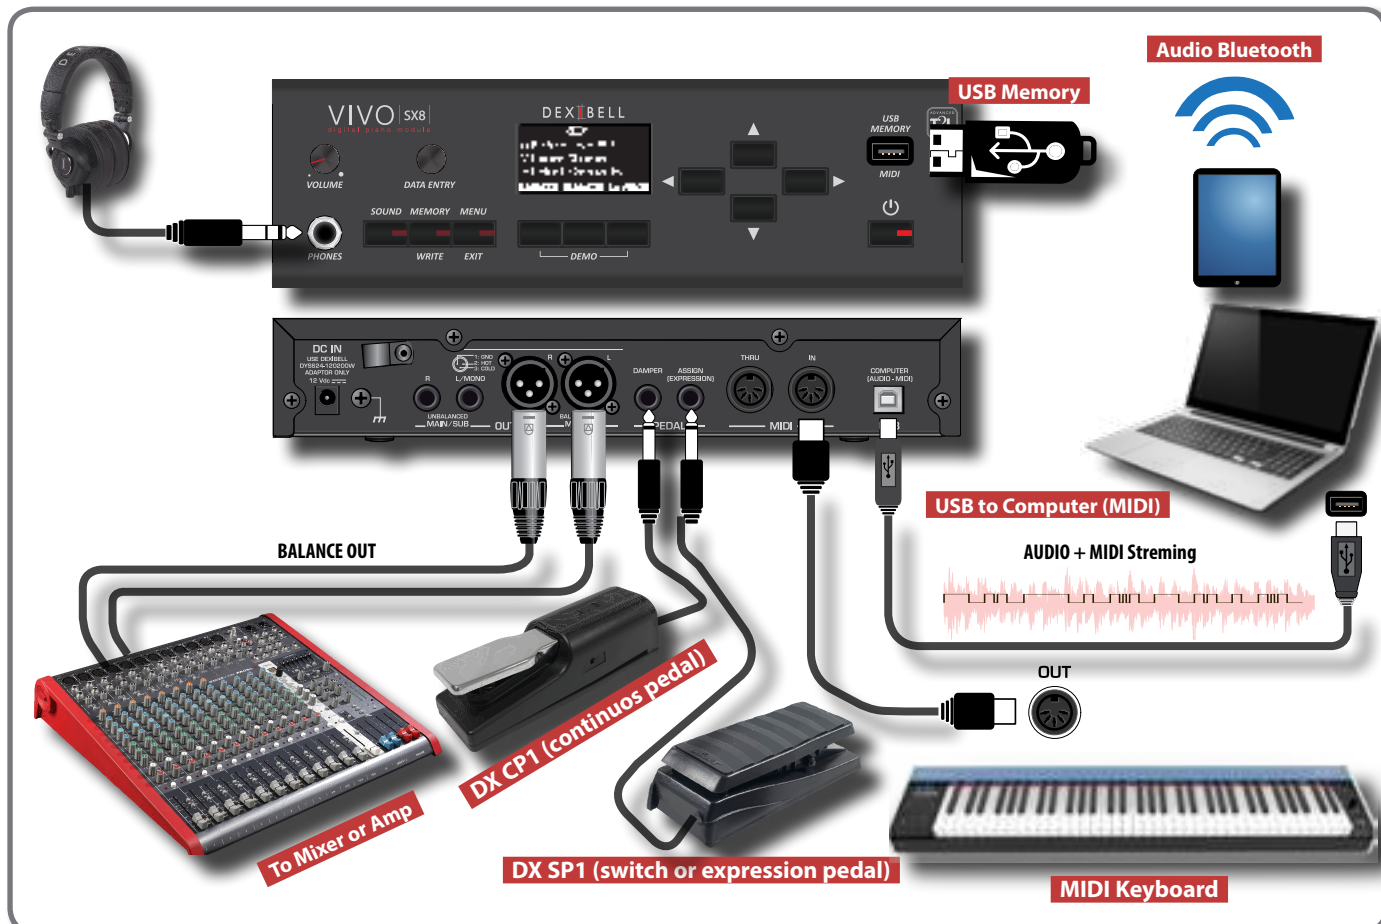 

This section explains the basic button operations used to operate the VIVO SX8.

DATA ENTRY


- Use it to scroll items through a list and change the value of the parameters.

MENU/EXIT

- Press this button to open and close the menu page where you can view and select all available functions.


Arrows Button

- Master Page



- Use the [▲] [▼] buttons to select the current part (1,2 or 3).
- Use the [◀] [▶] to select the next or previous sound of the current part.

- Other Page



- Use the [▲] [▼] buttons to move the cursor up or down.
- Use the [▶] button to access to access in a submenu.
- Use the [◀] [▶] buttons to edit the parameters value.

Sounds List

Press this button to access the Sounds List.
The family and the current sound of the selected part is temporary showed.

- Use the [DATA ENTRY] knob or the [▲] [▼] buttons to scroll and select sounds in the list.
- Press the [◀] [▶] buttons to select the next or previous sound family.

Function Buttons

Press these buttons to select functions/options shows at the bottom of the display.

Favorite Settings

- HOW TO MEMORIZE YOUR FAVORITE SETTING

The VIVO SX8 allows you to memorize your favorite settings for easy recall whenever they're needed. Up to 80 complete setups can be saved.

- Press and hold the [MEMORY/WRITE] button to call up the memories page. Its indicator flashes.
- Use the [DATA ENTRY] knob or the [▲] [▼] buttons to select one of the memory location.
- Press the function button that shows "SAVE" at the bottom of the display.
- Use the [▲] [▼] and [◀] [▶] buttons to enter the desired name.
- To confirm press the function button that shows "OK" at the bottom of the display.

- HOW TO RECALL YOUR FAVORITE SETTING

- Press the [MEMORY/WRITE] button to call up the memories page.
- Use the [DATA ENTRY] knob or the [▲] [▼] buttons to select one of the memory location.
- Press the "RECALL" function button under the display to select the memory.

 
7 Basic Operation





About the Display and Cursor Operation

This section introduces the information that appear on the main page. Moreover this section illustrates how to navigate the menu.

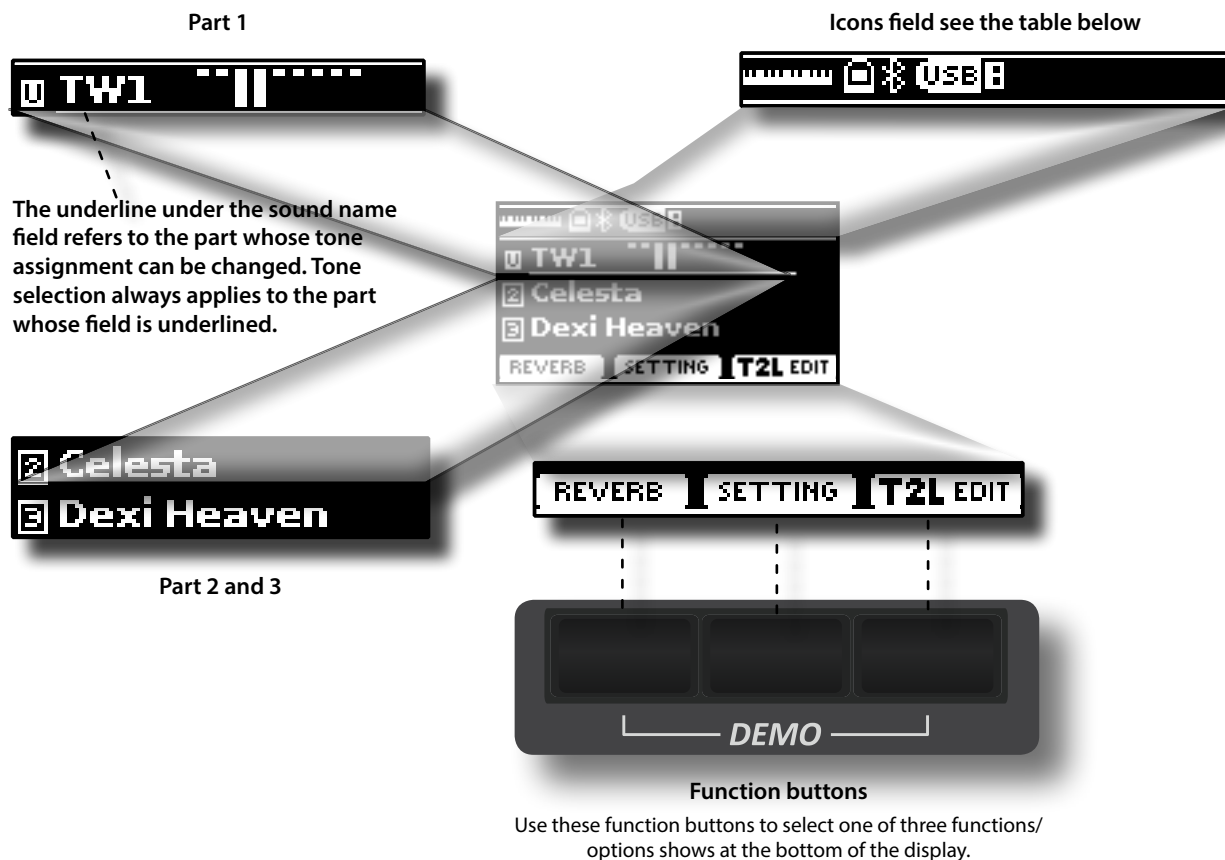Main Page

The VIVO SX8 main page contains many useful information.




Icons Field	Explanation	Icons Field	Explanation
	An USB MIDI keyboard is connected to the VIVO SX8's USB "MEMORY" port.		Bluetooth indicator • Steady icon: Connected to a device.
	A computer is connected to the VIVO SX8's USB "COMPUTER" port.		A USB memory is connected to your unit.

Moving the cursor and setting parameter values

1. Press the [MENU/EXIT] button to access to the available function groups.



 2. Use the [DATA ENTRY] knob or the [▲][▼] buttons to select the desired function group.

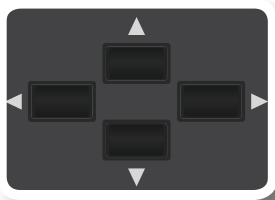


3. Press the [▶] button to enter in the selected function group.



If the functions are grouped under others groups:

 4. Use the [DATA ENTRY] knob or the [▲][▼] buttons to scroll the list of groups of parameters.
5. Press the [▶] button to enter in the selected under group.
6. Use the [▲][▼] buttons to scroll the list of parameters.
The selected parameter field is highlighted.
7. Use the [DATA ENTRY] knob to set the desired value.

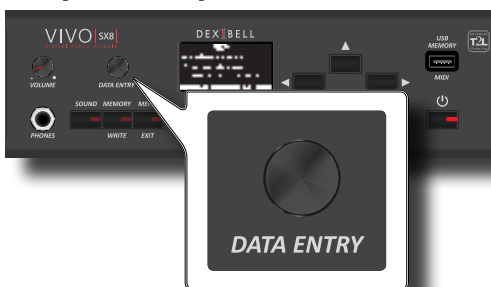

8. Press the [MENU/EXIT] button to return to the main page.

Assigning the Name You Specify

 
In many cases you'll have to assign a name to a file. In the following example, we will learn how to give a Memory name.

After the selection of saving a Memory, the display looks as follows:




A Memory name is suggested by the VIVO SX8.


1. Use the [DATA ENTRY] knob or the [▲][▼] buttons to select a different character.
2. Use the [◀] [▶] buttons to select the next character position you want to change, then use the [▲][▼] buttons again.
3. You can press the [A/a/#] Function button to switch between upper- and lower-case characters as well as numbers.

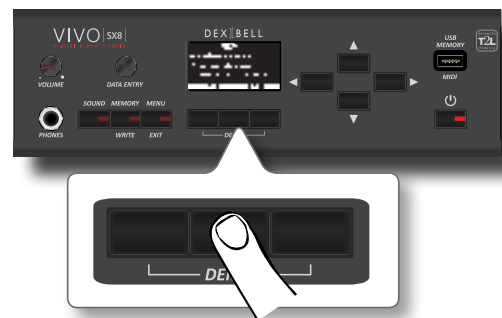

 4. To delete the selected character, simultaneously press the central and right Function button.

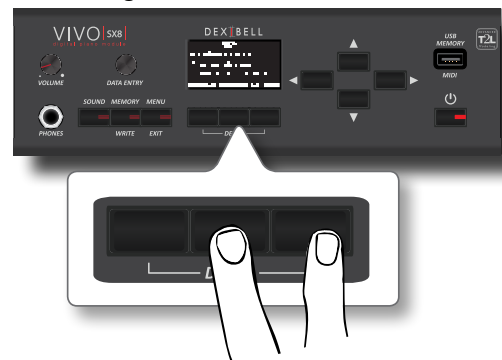

 5. To insert a character, simultaneously At the same press the left and central Function button.

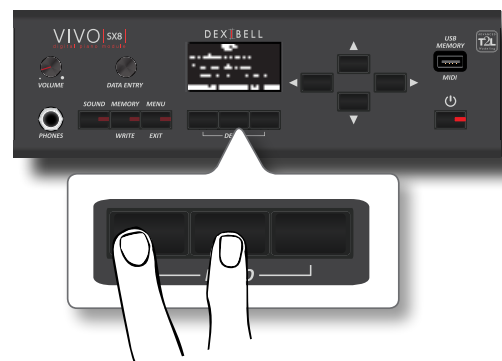

6. Repeat steps (2) and (3) to complete the name.

8 Main Connections

The VIVO SX8 allows you to connect an external keyboard through two ways, via MIDI or via USB.

Connect a MIDI Keyboard

You can use a MIDI keyboard to control your VIVO SX8.

If you connect your computer to the VIVO SX8 as shown in the illustration, you'll be able to use the VIVO SX8 as a MIDI interface.

The MIDI messages received from the VIVO SX8's MIDI IN will be directly redirected to the its USB COMPUTER port together with the audio generated by VIVO SX8. Audio streaming and MIDI through the same cable.

1. Rotate the [VOLUME] knob counterclockwise to minimize the volume.
2. Use a MIDI cable (commercially available) to connect the VIVO SX8's MIDI IN socket to the MIDI OUT socket of the external MIDI keyboard.



3. If you want to work with a DAW software, use a A→B-type USB (commercially available) cable to connect the VIVO SX8's USB COMPUTER PORT to the USB port of your computer.

If you connect your also your computer to the VIVO SX8 as shown in the illustration, you'll be able to use the VIVO SX8 as a MIDI interface.

The MIDI messages received from the VIVO SX8's USB MEMORY socket will be directly redirected to the its USB COMPUTER port.

1. Rotate the [VOLUME] knob counterclockwise to minimize the volume.
2. Use a A→B-type USB (commercially available) to connect the VIVO SX8's USB MEMORY socket to the USB socket of the external MIDI keyboard.



3. If you want to work with a DAW software, use a A→B-type USB (commercially available) cable to connect the VIVO SX8's USB COMPUTER PORT to the USB port of your computer.



Matching MIDI Channels

The VIVO SX8 has three parts. For each part you can change the MIDI channel to match them with the device you connected.

Here below the list of MIDI channels for each part:

Part	MIDI RX channel (default)
PART 1	1
PART 2	2
PART 3	3
MEMORY	15
ORGAN CONTROL	14

The MEMORY part is used to recall memories. For more information see the owner's manual.

The ORGAN CONTROL part is used to control the Drawbars and other parameters of Organ via MIDI. For more information see the owner's manual.

Connect a USB MIDI Keyboard

You can use a USB MIDI keyboard to control your VIVO SX8.

For details on MIDI settings of the external device, refer to its owner's manual.

Number of channel	3
-------------------	---

Using the VIVO SX8 with Your Computer

If you use a USB cable (commercially available) to connect the USB COMPUTER port on the VIVO SX8's panel to your computer's USB connector, you can record and play **audio or MIDI data** by your MIDI software (DAW software).

NOTE

To use the USB audio streaming you need of a computer equipped with MAC OSX or LINUX, an iPad or iPhone.



1. Use a A→B-type USB cable (sold separately) to connect the VIVO SX8 to your computer.

NOTE

- Switch on the VIVO SX8 before you start up the DAW software on your computer.
- Before to connect any other equipment, move the [VOLUME] knob counterclockwise to minimize the volume.

The sound of the VIVO SX8 can now be recorded on your computer and the audio output of the computer can be reproduced by the audio system connected to the VIVO SX8's audio OUTPUT jacks.

NOTE

To use the USB audio streaming you need of a computer equipped with MAC OSX or LINUX, an iPad or iPhone.

Adjusting the USB Audio

Use this function if you need to adjust the audio output and input levels via USB.

1. Press [MENU/EXIT] button and select USB AUDIO function.




2. Use the [▲] [▼] buttons to select the parameter you want to edit.
3. Use the [DATA ENTRY] knob to choose the desiderate audio level.

Parameter	Setting	Explanation
Input Level	-inf~0 dB	Adjust the USB audio input level.
Output Level	-inf~0 dB	Adjust the USB audio output level.

USB Audio Feature

 Thanks to the USB audio you can record the audio of the VIVO SX8 directly without using any internal digital analogue converter. This greatly increases audio quality and noise immunity.

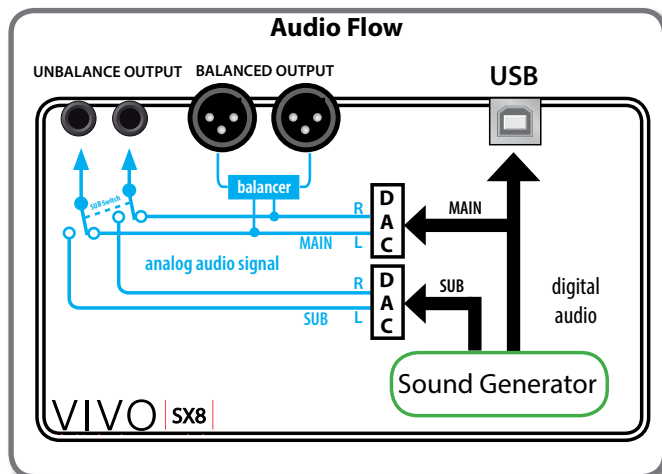

The VIVO SX8's audio format:

Sampling rate	48 Khz
Bit depth	24

VIVO SX8's Tone List

Num.	Name	PC	CC00 (MSB)
PIANO			
0001	Italian Live PLT	1	71
0002	Italian PLT	1	70
0003	Italian Classic PLT	1	72
0004	Italian Bright PLT	1	73
0005	Italian Memory PLT	1	74
0006	USA Live PLT	1	61
0007	USA PLT	1	60
0008	USA Classic PLT	1	62
0009	USA Bright PLT	1	63
0010	USA Memory PLT	1	64
0011	VIVO Upright	1	2
0012	Elec.Grand	3	2
0013	E.Grand Trem	3	3
0014	Rock Piano	3	1
E. PIANO			
0015	EPBell Chorus PLT	5	107
0016	EPBell Phaser PLT	5	108
0017	EPBell Tremolo PLT	5	109
0018	EPBell OD PLT	5	110
0019	EPBell Phr+Trm PLT	5	111
0020	EPBell Flanger PLT	5	113
0021	EPBell HardOD PLT	5	114
0022	EPBell Bri+Cho PLT	5	115
0023	EPBell PLT	5	106
0024	70s EP Chorus PLT	5	101
0025	70s EP Phaser PLT	5	102
0026	70s EP Tremolo PLT	5	103
0027	70s EP OD PLT	5	104
0028	70s EP Phr+Trm PLT	5	105
0029	70s EP Bright PLT	5	116
0030	70s EP Bri+Cho PLT	5	117
0031	70s EP Bri+Pha PLT	5	118
0032	70s EP Bri+Tre PLT	5	119
0033	70s EP PLT	5	100
0034	Dirty EPBell PLT	5	112
0035	Dyno Stage	5	0
0036	Dyno Trem	5	7
0037	Dyno Bell	5	8
0038	Suitcase	5	1
0039	Phaser EP	5	2
0040	Wurly	5	5
0041	Trem.Wurly	5	6
0042	Soft E.Piano	5	3
0043	Bright E.Piano	5	4
0044	FM Full Tines	6	0
0045	FM E.Piano	6	1

Num.	Name	PC	CC00 (MSB)
PERCUSSIVE			
0046	Doctor Clav	8	2
0047	Cool Clav	8	0
0048	Funky Clav	8	3
0049	Groovy Clav	8	1
0050	Wah-Wah Clav	8	4
0051	Drive Clav	8	5
0052	Vibraphone	12	0
0053	Marimba	13	0
0054	Celesta	9	0
ORGAN TW			
More than 100 preset. See "VIVO SX8's Organ Preset List" (p. 17)			
STRINGS			
0055	Easy Strings	50	10
0056	FastOrchestra	50	4
0057	Attack Strings	49	2
0058	Choir Strings	52	1
0059	Large Strings	50	5
0060	MellowStrings	50	6
0061	Soft Strings	50	7
0062	5th Strings	50	8
0063	Slow Analog	50	9
0064	Orchestra	49	1
0065	80's Strings	52	0
0066	Syn. Strings	51	1
0067	Pizzicato	46	0
0068	Strings Pad	51	0
0069	StrTape1Dry	49	100
0070	StrTape1Rev	49	101
0071	StrTape1Cut	49	102
0072	CloTape2Dry	43	103
0073	CloTape2Rev	43	104
0074	CloTape2Cut	43	105
0075	VlnsTape1Dry	50	100
0076	VlnsTape1Rev	50	101
0077	VlnsTape1Cut	50	102
PAD/CHOIR			
0078	Dexi Heaven	101	1
0079	Fanta Bell	101	0
0080	Warm Pad	90	0
0081	Soft Pad	90	1
0082	Square Pad	90	2
0083	90's Pad	51	2
0084	Space Vox	55	1
0085	Mmh Choir	53	0
0086	Choir Pad	54	1

Num.	Name	PC	CC00 (MSB)
0087	FlutTape1Dry	74	100
0088	FlutTape1Rev	74	101
0089	FlutTape1Cut	74	102
0090	FemlTape2Dry	53	103
0091	FemlTape2Rev	53	104
0092	FemlTape2Cut	53	105
0093	BoysTapeDry	53	100
0094	BoysTapeRev	53	101
0095	BoysTapeCut	53	102
0096	MaleTape1Dry	53	106
0097	MaleTape1Rev	53	107
0098	MaleTape1Cut	53	108
BRASS/SYNTH			
0099	Full Brass	62	3
0100	Synth Brass	63	0
0101	Poly Brass	63	1
0102	Analog Brass	63	2
0103	Fat Syn Brass	63	3
0104	Trumpet Sect.	57	3
0105	Trumpet	57	2
0106	Horns	61	0
0107	Tenor Sax	67	0
0108	Alto Sax	66	0
0109	Flugelhorn	57	1
0110	Soprano Sax	65	0
0111	Classic Trumpet	57	0
0112	Lucky Lead	83	0
0113	Expressive	83	1
0114	ExpressiveFat	83	2
0115	ExpressiveBell	83	3
0116	Mellow Lyle	83	4
0117	Octave OSC	83	5
0118	Mellow Lead	83	6
0119	Clear Lead	83	7
0120	Saw Solo	83	8
0121	OSC Sync	83	9
0122	Mini Square	83	10
0123	Mini Triangle	83	11
0124	Triangle	83	12
0125	Pure Sine	83	13
0126	Saw Square	83	14
0127	Clear SawSqr	83	15
0128	70's SawSqr	83	16
0129	2600 Pulse 50	83	17
0130	2600 Pulse 20	83	18
0131	2600 PulseOD	83	19
0132	Clear PW	83	20

Num.	Name	PC	CC00 (MSB)
0133	OB Synth 1	81	0
0134	OB Synth 2	81	1
0135	OB Synth 3	81	2
0136	OB Synth 4	81	3
0137	Lyle Lead	81	4
0138	Super Saw	91	1
0139	Synth Lead 1	82	0
0140	Synth Mellow	82	1
0141	Synth Lead 2	82	2
0142	Synth Lead 3	82	3
0143	Synth Lead 4	82	4
0144	Fast Synth	91	2
0145	Poly Saw	91	3
0146	Euro Synth	91	4
0147	Euro Stack	94	0
0148	Poly Chord	94	1
0149	Synth Vox	55	0

Num.	Name	PC	CC00 (MSB)
0150	Urban Harp	47	1
GUITAR/BASS			
0151	Nylon Guitar	25	0
0152	Power GT.	30	1
0153	Muted GT.	30	2
0154	Jazz Guitar	27	0
0155	Rock Bass	35	1
0156	RockSlapBass	38	0
0157	RockSoftSlap	38	1
0158	Elec.Bass	34	2
0159	El.Bass Dark	34	3
0160	Soft Slap Bs	37	0
0161	Hard Slap Bs	37	1
0162	Pop Big Bass	34	4
0163	Pop Bass	34	5

Num.	Name	PC	CC00 (MSB)
0164	Pop Elec.Bass	34	6
0165	Fat Bass	34	7
0166	Contemp.Bass	34	8
0167	PalmMutingBs	34	9
0168	Old Muted	35	2
0169	Fretless Bass	36	0
0170	Upright Bass	33	7
0171	Pedal Bass	39	5
0172	Pedal DoubleBs	33	5
0173	Modular Bass	39	1
0174	Fat Bass	39	2
0175	Reso Bass	39	3
0176	Big Reso Bass	39	4
0177	FM Bass	40	3
0178	Synth Bass	39	0

VIVO SX8's Organ Preset List

Num.	Upper Preset	Lower Preset	Pedal Preset
TW1/TW2			
0001	00 5320 000	00 4545 440	73
0002	00 4432 000	00 4423 220	85
0003	00 8740 000	00 7373 430	80
0004	00 4544 222	00 4544 220	08
0005	00 5403 000	00 6644 322	28
0006	00 4675 300	00 5642 200	
0007	00 5645 320	00 6845 433	
0008	00 6876 540	00 8030 000	
0009	32 7645 222	42 7866 244	
0010	88 8000 000	60 6000 000	
0011	87 8000 456	88 00 70 770	
0012	88 8800 000	83 8000 000	
0013	86 8600 008	00 4440 000	
0014	80 8800 008	20 7004 000	
0015	87 6543 211	00 6620 000	
0016	88 5324 588	00 7500 000	
0017	80 8000 008	80 8400 008	
0018	88 8233 211		
0019	86 4200 357		
0020	68 6040 000		
0021	88 8604 000		
0022	80 0008 888		
0023	00 8800 000		
FARF			
0001	08 0088 888	80 8000 008	80
0002	80 8000 808	08 0000 800	88

Num.	Upper Preset	Lower Preset	Pedal Preset
0003	80 8080 808	80 8080 008	
0004	08 0888 808	00 8088 800	
0005	08 8880 800	00 0880 080	
VX			
0001	38 8033 078	03 8800 367	88 0000 080
0002	80 8000 008	08 8000 008	08 0000 088
0003	88 8026 057	08 0800 557	88 0000 008
0004	08 0048 088	03 8000 667	88 0000 088
0005	88 0048 056	05 6700 475	80 0000 088
PIPE			
0001	00 8000 000	08 0000 000	800
0002	08 8000 000	88 0000 000	880
0003	08 8800 000	88 8000 000	888
0004	08 8880 000	88 8800 000	080
0005	88 8888 000	88 8808 000	808
USER 1			
0001	00 8000 000	08 0000 000	800 0000 000
0002	08 8000 000	88 0000 000	880 0000 000
0003	08 8800 000	88 8000 000	888 0000 000
0004	08 8880 000	88 8800 000	080 0000 000
0005	88 8888 000	88 8808 000	808 0000 000
USER 2			
0001	00 8000 000	08 0000 000	800 0000 000
0002	08 8000 000	88 0000 000	880 0000 000
0003	08 8800 000	88 8000 000	888 0000 000
0004	08 8880 000	88 8800 000	080 0000 000
0005	88 8888 000	88 8808 000	808 0000 000

10 Specifications

ITEMS		VIVO SX8
TONE GENERATOR		T2L: Sampling and Modelling Technology
MODELLING		Reactive to player articulation
SAMPLING		XXL wave size, holophonic recording up to 15 seconds on lower piano notes
SOUND WAVE FORMAT		24 bit linear - 48 KHz (Internal processing and DSP at 32 bit floating)
DIGITAL ANALOG CONVERSION (DAC)		24 bit linear - 48 KHz, Dynamic Range, S/N:106dB
MAXIMUM POLYPHONY		Unlimited with 320 Oscillator
ORGAN TYPES		TW1, TW2, FARF, VX, PIPE + User1, User2 downloadable from website
SOUNDS		Over 100 Organ Preset + 178 Sounds + User downloadable from website (Compatible with .sf2)
MEMORY		Internal: 80 User: Unlimited loadable from USB Memory
MIDI PART		3
MIDI TOUCH SENSITIVITY		Velocity adjustment (pp, p, mf, f, ff)
REVERB		24 Types
EFFECTS		Rotary, Overdrive, Vibrato/Chorus for Organ + 9 independent DSP Effects (3 x 3 Parts) using "seamless changes" technology at effect recall
MASTER EQUALIZER		3-band Digital Equalizer
MASTER TUNING		YES: 415,4Hz to 466,1 Hz (adjustable increments of 0,1 Hz) + 2 Preset (440 Hz, 442 Hz)
TEMPERAMENT		9 Types
USER TEMPERAMENT		3 User
WIRELESS CONNECTION		Audio and MIDI Bluetooth® (4.2 Low Energy) Wi-Fi TM (ready for future software version)
RHYTHM PATTERNS		X MURE APP for i-Phone and i-Pad (FREE) with multitracks audio patterns
DISPLAY		Graphic LCD 128 x 64 dots Organic LED, high contrast type
CONNECTORS	DC IN socket	for supplied AC adaptor
	Unbalanced Output (L/Mono, R) jacks	Assignable as SUB OUTPUT 1/4-inch phone type x 2
	Balanced Output (L, R)	XLR type x 2
	Phones jacks	1 x Stereo 1/4-inch phone type
	USB COMPUTER (Type B port)	Digital Audio OUT on USB (24 bit, 48 Khz) Digital Audio IN on USB (24 bit, 48 Khz)
	USB MEMORY (Type A port)	To Host (MIDI), To Device (MEMORY)
	MIDI sockets	IN, THRU
	DAMPER Pedal (HOLD) socket	Progressive Damper Action Pedal with sympathetic resonance simulation (Accept on/off pedal also)
	ASSIGN Pedal socket	Assignable (default Expression)
Power Supply		12V DC 2A , supplied AC/DC adaptor
POWER CONSUMPTION		Stand By: < 0,2 W Maximum: < 9 W "ErP" LEVEL VI for Echo efficiency on stand-by consumption
DIMENSIONS		292 (W) x 173 (D) x 87 mm (H) 11-1/2 (W) x 6-13/16 (D) x 3-7/16 (H) inches
WEIGHT		1.9 kg (excluding AC adaptor) 4 lbs 4 oz (excluding AC adaptor)
SUPPLIED ACCESSORIES		Quick guide AC adaptor (DEXIBELL DYS624-120200W) 2 Rack-mount bracket
OPTIONS (sold separately)		DX CP1 continuous sustain pedal with selectable mode switch (Switch, continuous) DX SP1 switch pedal with selectable mode switch (normally closed, normally open) DX HF7 Stereo headphones

NOTE

In the interest of product, the specification and description are subject to change without notice.



This product complies with the requirements of EMC Directive 2014/30/EU.

For European Countries

NOTICE

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

AVIS

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

IMPORTANT NOTICE FOR THE UNITED KINGDOM

IMPORTANT: THE WIRES IN THIS MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE.

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.
The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.
Under no circumstances must either of the above wires be connected to the earth terminal of a three pin plug.

European Community Declaration of Conformity

English	Hereby, DEXIBELL, declares that this VIVO SX8 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.
Italiano [Italian]	Con la presente DEXIBELL dichiara che questo VIVO SX8 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/UE.
Français [French]	Par la présente DEXIBELL déclare que l'appareil VIVO SX8 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/UE.
Deutsch [German]	Hiermit erklärt DEXIBELL, dass sich das Gerät VIVO SX8 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU befindet.
Nederlands [Dutch]	Hierbij verklaart DEXIBELL dat het toestel VIVO SX8 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EU.
Español [Spanish]	Por medio de la presente DEXIBELL declara que el VIVO SX8 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2014/53/UE.
Português [Portuguese]	DEXIBELL declara que este VIVO SX8 está conforme com os requisitos essenciais e outras disposições da Directiva 2014/53/UE.
български [Bulgarian]	С настоящото DEXIBELL декларира, че това устройство VIVO SX8 е в съответствие със съществените изисквания и други приложими разпоредби на Директиви 2014/53/ЕС
Hrvatski [Croatian]	DEXIBELL ovim putem izjavljuje da je ovaj uređaj VIVO SX8 sukladan osnovnim zahtjevima i ostalim bitnim odredbama Direktiva 2014/53/EU
Česky [Czech]	DEXIBELL tímto prohlašuje, že tento VIVO SX8 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2014/53/EU.
Dansk [Danish]	Undertegnede DEXIBELL erklærer herved, at følgende udstyr VIVO SX8 overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU.
Eesti [Estonian]	Käesolevaga kinnitab DEXIBELL seadme VIVO SX8 vastavust direktiivi 2014/53/EL põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ DEXIBELL ΔΗΛΩΝΕΙ ΟΤΙ VIVO SX8 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/ΕΕ.
Íslenska [Icelandic]	Hér, DEXIBELL, því yfir að þetta VIVO SX8 tæki er í samræmi við grunnkröfur og önnur viðeigandi ákvæði tilskipana 2014/53/ ESB
Latviešu valoda [Latvian]	Ar šo DEXIBELL deklarē, ka VIVO SX8 atbilst Direktīvas 2014/53/ES būtiskajām prasībām un citiemar to saistītajiem noteikumiem.
Lietuvių kalba [Lithuanian]	Šiuo DEXIBELL deklaruoja, kad šis VIVO SX8 atitinka esminius reikalavimus ir kitas 2014/53/ES Direktyvos nuostatas.
Malti [Maltese]	Hawnhekk, DEXIBELL, jiddikjara li dan VIVO SX8 jikkonforma mal-htigijiet essenzzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 2014/53/UE.
Magyar [Hungarian]	Alulírott, DEXIBELL nyilatkozom, hogy a VIVO SX8 megfelel a vonatkozó alapvető követelményeknek és az 2014/53/EU irányelv egyéb előírásainak.
Norsk [Norwegian]	Herved DEXIBELL, erklærer at denne VIVO SX8 enheten, er i samsvar med de grunnleggende kravene og andre relevante bestemmelser i direktivene 2014/53/EU
Polski [Polish]	Niniejszym DEXIBELL oświadcza, że VIVO SX8 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 2014/53/UE.
Română [Romanian]	Prin prezenta, DEXIBELL declară că acest dispozitiv VIVO SX8 este în conformitate cu cerințele esențiale și alte prevederi relevante ale Directivei 2014/53/UE
Slovenščina [Slovenian]	DEXIBELL izjavlja, da je ta VIVO SX8 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 2014/53/EU.
Slovenčina [Slovak]	DEXIBELL týmto vyhlasuje, že VIVO SX8 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 2014/53/EU.
Suomi [Finnish]	DEXIBELL vakuuttaa täten että VIVO SX8 tyyppinen laite on direktiivin 2014/53/EU oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska [Swedish]	Härmed intygar DEXIBELL att denna VIVO SX8 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/EU.

DEXIBELL

DEXIBELL

is a brand of

PROEL SPA

(Worldwide Headquarters)

Via alla Ruenia, 37/43

64027 Sant'Omero (TE) - ITALY

Tel. +39 0861 81241

Fax +39 0861 887862

P.I. 00778590679

N.Reg.AEE IT 08020000002762

info@dexibell.com

dexibell.com

