

# DEXIBELL

## CLASSICO L4

### How to Update to the Latest Version

To update the Classico L4 proceed as follows:

#### Install the firmware in a USB Memory:

1. Download the appropriate new version for your instrument from [www.dexibell.com](http://www.dexibell.com) web site.
2. Create in your personal computer a temporary folder.
3. Unzip the new version in the temporary folder you just created.
  - Locate in the temporary folder the three update files:  
updater.bin, signature.bin and core-image-dexibell-\*\*.bin
4. Insert an empty USB Memory in your personal computer.
5. Copy the three files (updater.bin, signature.bin and core-image-dexibell-\*\*.bin) into the root of the USB Memory.
6. Safely disconnect the USB Memory.

#### Update the firmware:

7. If the instrument is "ON", press the "⏻" button, located on the right panel, to switch "OFF" the instrument.
8. Insert the USB Memory in the USB socket of your instrument
9. Switch "ON" the instrument; the update process will start automatically. The Crescendo led bar will show the progress. When all the leds are lit, switch off the instrument, take out the USB memory stick and switch the instrument "ON" again.

Please press and hold the [FUNCTION/EXIT] button and then "0" piston. In the resulting lit tilt tabs, read the small numbers in the lower corner and you will have the version number.

For instance, if "Bourdon16" (40) and "Quinte 2 2/3" (7) are lit, you have the Ver. 4.07.

\* We recommend to use a good quality USB memory, since the update process is very demanding from transfer rate point of view, and it doesn't start if a slow USB memory is detected.