

S2 Tones List

Num.	Name	PC	CC00 (MSB)
------	------	----	------------

PIANO			
0001	USA PLT	1	60
0002	USA Live PLT	1	61
0003	USA Classic PLT	1	62
0004	USA Bright PLT	1	63
0005	USA Memory PLT	1	64
0006	USA Rev PLT	1	65
0007	Japan PLT	2	10
0008	Japan Live PLT	2	11
0009	Japan Classic PLT	2	12
0010	Japan Bright PLT	2	13
0011	Japan Memory PLT	2	14
0012	Japan Rev PLT	2	15
0013	VIVO Upright	1	2
0014	Elec.Grand	3	2
0015	E.Grand Trem	3	3
0016	Rock Piano	3	1
0017	Celesta	9	0
0018	Vibraphone	12	0
0019	Marimba	13	0
E.PIANO			
0020	EPBell Chorus PLT	5	107
0021	EPBell Phaser PLT	5	108
0022	EPBell Tremolo PLT	5	109
0023	EPBell OD PLT	5	110
0024	EPBell Phr+Trm PLT	5	111
0025	EPBell Flanger PLT	5	113
0026	EPBell HardOD PLT	5	114
0027	EPBell Bri+Cho PLT	5	115
0028	EPBell PLT	5	106
0029	EP Ballad PLT	5	122
0030	70s EP Chorus PLT	5	101
0031	70s EP Phaser PLT	5	102
0032	70s EP Tremolo PLT	5	103
0033	70s EP OD PLT	5	104
0034	70s EP Phr+Trm PLT	5	105
0035	70s EP Bright PLT	5	116
0036	70s EP Bri+Cho PLT	5	117
0037	70s EP Bri+Pha PLT	5	118
0038	70s EP Bri+Tre PLT	5	119
0039	70s EP Trm+OD PLT	5	120
0040	70s EP EQ+Trm PLT	5	121
0041	70s EP PLT	5	100
0042	Dirty EPBell PLT	5	112
0043	Dyno Stage	5	0
0044	Dyno Trem	5	7
0045	Dyno Bell	5	8
0046	Suitcase	5	1
0047	Phaser EP	5	2

Num.	Name	PC	CC00 (MSB)
------	------	----	------------

0048	Suitcase Trem	5	9
0049	Suitcase Chr	5	10
0050	Suitcase Chr+Trm	5	11
0051	Wurly	5	5
0052	Trem.Wurly	5	6
0053	Soft E.Piano	5	3
0054	Bright E.Piano	5	4
0055	FM Full Tines	6	0
0056	FM E.Piano	6	1
0057	Doctor Clav	8	2
0058	Cool Clav	8	0
0059	Funky Clav	8	3
0060	Groovy Clav	8	1
0061	Wah-Wah Clav	8	4
0062	Drive Clav	8	5
ORGAN TW			
More than 100 presets. See next pages.			
ENSEMBLE			
0063	Easy Strings	50	10
0064	FastOrchestra	50	4
0065	Attack Strings	49	2
0066	Choir Strings	52	1
0067	Large Strings	50	5
0068	MellowStrings	50	6
0069	Soft Strings	50	7
0070	5th Strings	50	8
0071	Slow Analog	50	9
0072	Orchestra	49	1
0073	80's Strings	52	0
0074	Syn. Strings	51	1
0075	Pizzicato	46	0
0076	Strings Pad	51	0
0077	StrTape1Dry	49	100
0078	StrTape1Rev	49	101
0079	StrTape1Cut	49	102
0080	CiloTape2Dry	43	103
0081	CiloTape2Rev	43	104
0082	CiloTape2Cut	43	105
0083	VlnsTape1Dry	50	100
0084	VlnsTape1Rev	50	101
0086	Dexi Heaven	101	1
0087	Fanta Bell	101	0
0088	Warm Pad	90	0
0089	Soft Pad	90	1
0090	Square Pad	90	2
0091	90's Pad	51	2
0092	Space Vox	55	1
0093	Mmh Choir	53	0

Num.	Name	PC	CC00 (MSB)
------	------	----	------------

0094	Choir Pad	54	1
0095	FlutTape1Dry	74	100
0096	FlutTape1Rev	74	101
0097	FlutTape1Cut	74	102
0098	MaleTape1Dry	53	106
0099	MaleTape1Rev	53	107
0100	MaleTape1Cut	53	108
SYNTH			
0101	Lucky Lead	83	0
0102	Expressive	83	1
0103	ExpressiveFat	83	2
0104	ExpressiveBell	83	3
0105	Mellow Lyle	83	4
0106	Octave OSC	83	5
0107	Mellow Lead	83	6
0108	Clear Lead	83	7
0109	Saw Solo	83	8
0110	OSC Sync	83	9
0111	Mini Square	83	10
0112	Mini Triangle	83	11
0113	Triangle	83	12
0114	Pure Sine	83	13
0115	Saw Square	83	14
0116	Clear SawSqr	83	15
0117	70's SawSqr	83	16
0118	2600 Pulse 50	83	17
0119	2600 Pulse 20	83	18
0120	2600 PulseOD	83	19
0121	Clear PW	83	20
0122	OB Synth 1	81	0
0123	OB Synth 2	81	1
0124	OB Synth 3	81	2
0125	OB Synth 4	81	3
0126	Lyle Lead	81	4
0127	Super Saw	91	1
0128	Synth Lead 1	82	0
0129	Synth Mellow	82	1
0130	Synth Lead 2	82	2
0131	Synth Lead 3	82	3
0132	Synth Lead 4	82	4
0133	Fast Synth	91	2
0134	Poly Saw	91	3
0135	Euro Synth	91	4
0136	Euro Stack	94	0
0137	Poly Chord	94	1
0138	Synth Vox	55	0
0139	Urban Harp	47	1
OTHER			
0140	Full Brass	62	3

Num.	Name	PC	CC00 (MSB)
------	------	----	---------------

Num.	Name	PC	CC00 (MSB)
------	------	----	---------------

Num.	Name	PC	CC00 (MSB)
------	------	----	---------------

0141	Synth Brass	63	0
0142	Poly Brass	63	1
0143	Analog Brass	63	2
0144	Fat Syn Brass	63	3
0145	Trumpet Sect.	57	3
0146	Trumpet	57	2
0147	Horns	61	0
0148	Tenor Sax	67	0
0149	Alto Sax	66	0
0150	Flugelhorn	57	1
0151	Soprano Sax	65	0
0152	Classic Trumpet	57	0
0153	Nylon Guitar	25	0
0154	Power GT.	30	1
0155	Muted GT.	30	2
0156	Jazz Guitar	27	0
0157	Rock Bass	35	1
0158	RockSlapBass	38	0
0159	RockSoftSlap	38	1
0160	Elec.Bass	34	2
0161	El.Bass Dark	34	3
0162	Soft Slap Bs	37	0
0163	Hard Slap Bs	37	1
0164	Pop Big Bass	34	4
0165	Pop Bass	34	5
0166	Pop Elec.Bass	34	6
0167	Fat Bass	34	7
0168	Contemp.Bass	34	8
0169	PalmMutingBs	34	9
0170	Old Muted	35	2
0171	Fretless Bass	36	0
0172	Upright Bass	33	7
0173	Pedal Bass	39	5
0174	Pedal DoubleBs	33	5
0175	Modular Bass	39	1
0176	Fat Bass	39	2
0177	Reso Bass	39	3
0178	Big Reso Bass	39	4
0179	FM Bass	40	3
0180	Synth Bass	39	0

S2 ORGAN Presets List

TW 1 (CCOO/MSB=0, CC32/LSB=1, PC=1)

TW 2 (CCOO/MSB=0, CC32/LSB=1, PC=4)

MAIN PRESET		LOWER PRESET		BASS PRESET	
0001	00 5320 000	0001	00 4545 440	0001	73
0002	00 4432 000	0002	00 4423 220	0002	85
0003	00 8740 000	0003	00 7373 430	0003	80
0004	00 4544 222	0004	00 4544 220	0004	08
0005	00 5403 000	0005	00 6644 322	0005	28
0006	00 4675 300	0006	00 5642 200		
0007	00 5645 320	0007	00 6845 433		
0008	00 6876 540	0008	00 8030 000		
0009	32 7645 222	0009	42 7866 244		
0010	88 8000 000	0010	60 6000 000		
0011	87 8000 456	0011	88 00 70 770		
0012	88 8800 000	0012	83 8000 000		
0013	86 8600 008	0013	00 4440 000		
0014	80 8800 008	0014	20 7004 000		
0015	87 6543 211	0015	00 6620 000		
0016	88 5324 588	0016	00 7500 000		
0017	80 8000 008	0017	80 8400 008		
0018	88 8233 211				
0019	86 4200 357				
0020	68 6040 000				
0021	88 8604 000				
0022	80 0008 888				
0023	00 8800 000				

FARF (CCOO/MSB=2, CC32/LSB=1, PC=1)

MAIN PRESET		LOWER PRESET		BASS PRESET	
0001	08 0088 888	0001	80 8000 008	0001	80
0002	80 8000 808	0002	08 0000 800	0002	88
0003	80 8080 808	0003	80 8080 008		
0004	08 0888 808	0004	00 8088 800		
0005	08 8880 800	0005	00 0880 080		

VX (CCOO/MSB=1, CC32/LSB=1, PC=1)

MAIN PRESET		LOWER PRESET		BASS PRESET	
0001	38 8033 078	0001	03 8800 367	0001	88 0000 080
0002	80 8000 008	0002	08 8000 008	0002	08 0000 088
0003	88 8026 057	0003	08 0800 557	0003	88 0000 008
0004	08 0048 088	0004	03 8000 667	0004	88 0000 088
0005	88 0048 056	0005	05 6700 475	0005	80 0000 088

PIPE (CCOO/MSB=0, CC32/LSB=1, PC=91)

MAIN PRESET		LOWER PRESET		BASS PRESET	
0001	00 8000 000	0001	08 0000 000	0001	800
0002	08 8000 000	0002	88 0000 000	0002	880
0003	08 8800 000	0003	88 8000 000	0003	888
0004	08 8880 000	0004	88 8800 000	0004	080
0005	88 8888 000	0005	88 8808 000	0005	808

S2 ORGAN Presets List

USER 1(ccOO/MSB=0, CC32/LSB=11, PC=1)

MAIN PRESET		LOWER PRESET		BASS PRESET	
0001	00 8000 000	0001	08 0000 000	0001	800 0000 000
0002	08 8000 000	0002	88 0000 000	0002	880 0000 000
0003	08 8800 000	0003	88 8000 000	0003	888 0000 000
0004	08 8880 000	0004	88 8800 000	0004	080 0000 000
0005	88 8888 000	0005	88 8808 000	0005	808 0000 000

USER 2 (ccOO/MSB=0, CC32/LSB=12, PC=1)

MAIN PRESET		LOWER PRESET		BASS PRESET	
0001	00 8000 000	0001	08 0000 000	0001	800 0000 000
0002	08 8000 000	0002	88 0000 000	0002	880 0000 000
0003	08 8800 000	0003	88 8000 000	0003	888 0000 000
0004	08 8880 000	0004	88 8800 000	0004	080 0000 000
0005	88 8888 000	0005	88 8808 000	0005	808 0000 000

PIPE ORGAN	
BAROQUE	
PART 1 (MAIN) (MANUAL I)	
Drawb1	BOURDON 16
Drawb2	PRINCIPAL 8
Drawb3	ROHRFLÖTE 8
Drawb4	OCTAVE 4
Drawb5	SUPER OKTAVE 2
Drawb6	MIXTUR IV
Drawb7	VOX HUMANA 8
Drawb8	—
Drawb9	LOWER to UPPER
PART 2 (LOWER)(MANUAL II)	
Drawb1	BOURDON 8
Drawb2	SALICIONAL 8
Drawb3	FLUTE 4
Drawb4	QUINTE 2-2/3
Drawb5	CORNET V
Drawb6	TROMPETE 8
Drawb7	—
Drawb8	—
Drawb9	—
PART 3 (BASS)	
Drawb1	SUBBASS 16
Drawb2	OCTAVBASS 8
Drawb3	POSAUNE 16
Drawb4	—
Drawb5	—
Drawb6	—
Drawb7	—
Drawb8	—
Drawb9	—

FARF ORGAN	
PART 1 (MAIN)	
BASS 16'	
STRINGS 16'	
FLUTE 8'	
OBOE 8'	
TRUMPET 8'	
STRINGS 8'	
FLUTE 4'	
STRINGS 4'	
2 2/3'	
PART 2 (LOWER)	
BASS 16'	
STRINGS 16'	
FLUTE 8'	
OBOE 8'	
TRUMPET 8'	
STRINGS 8'	
FLUTE 4'	
STRINGS 4'	
2 2/3'	
PART 3 (BASS)	
16'	
SOFT/SHARP	
—	
—	
—	
—	
—	
—	
—	
—	

VX ORGAN	
PART 1 (MAIN)	
16'	
8'	
4'	
2'	
II	
III	
IV	
V	
M	
PART 2 (LOWER)	
16'	
8'	
4'	
2'	
II	
III	
IV	
V	
M	
PART 3 (BASS)	
16'	
8'	
—	
—	
—	
—	
—	
V	
M	